

USB Implementers Forum

USB4 Interoperability Test Procedures

Revision 1.05 – June 2025

Copyright © 2025, USB Implementers Forum, Inc.

All rights reserved.

A LICENSE IS HEREBY GRANTED TO REPRODUCE THIS SPECIFICATION FOR INTERNAL USE ONLY. NO OTHER LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE, IS GRANTED OR INTENDED HEREBY.

USB-IF AND THE AUTHORS OF THIS SPECIFICATION EXPRESSLY DISCLAIM ALL LIABILITY FOR INFRINGEMENT OF INTELLECTUAL PROPERTY RIGHTS, RELATING TO IMPLEMENTATION OF INFORMATION IN THIS SPECIFICATION. USB-IF AND THE AUTHORS OF THIS SPECIFICATION ALSO DO NOT WARRANT OR REPRESENT THAT SUCH IMPLEMENTATION(S) WILL NOT INFRINGE THE INTELLECTUAL PROPERTY RIGHTS OF OTHERS.

THIS SPECIFICATION IS PROVIDED "AS IS" AND WITH NO WARRANTIES, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE. ALL WARRANTIES ARE EXPRESSLY DISCLAIMED. NO WARRANTY OF MERCHANTABILITY, NO WARRANTY OF NON-INFRINGEMENT, NO WARRANTY OF FITNESS FOR ANY PARTICULAR PURPOSE, AND NO WARRANTY ARISING OUT OF ANY PROPOSAL, SPECIFICATION, OR SAMPLE.

IN NO EVENT WILL USB-IF OR USB-IF MEMBERS BE LIABLE TO ANOTHER FOR THE COST OF PROCURING SUBSTITUTE GOODS OR SERVICES, LOST PROFITS, LOSS OF USE, LOSS OF DATA OR

ANY INCIDENTAL, CONSEQUENTIAL, INDIRECT, OR SPECIAL DAMAGES, WHETHER UNDER CONTRACT, TORT, WARRANTY, OR OTHERWISE, ARISING IN ANY WAY OUT OF THE USE OF THIS SPECIFICATION, WHETHER OR NOT SUCH PARTY HAD ADVANCE NOTICE OF THE POSSIBILITY OF SUCH DAMAGES.

USB Type-C®, USB-C® and USB4® are trademarks of the Universal Serial Bus Implementers Forum (USB-IF). Thunderbolt™ is a trademark of Intel Corporation. All product names are trademarks, registered trademarks, or service marks of their respective owners.

Contents

SUMMARY OF CHANGES.....	7
RELATED DOCUMENTS.....	9
TERMS AND ABBREVIATIONS.....	10
1. INTEROPERABILITY TESTING	11
1.1. EQUIPMENT	12
1.1.1. <i>Equipment Setup</i>	15
1.2. SOFTWARE REQUIREMENTS	15
1.3. USB4 HOST CONTROLLER DRIVER INSTALLATION.....	16
1.4. ENUMERATION AND DRIVER INSTALLATION FOR DEVICE/S	16
1.5. USB4 INTEROPERABILITY LOGISTICAL OVERVIEW.....	16
1.6. PRE-TEST REQUIREMENTS	17
1.7. INTEROPERABILITY TESTING FOR UNIT UNDER TEST (UUT) WITH AND WITHOUT EXTERNAL POWER	17
1.8. D3 POWER CAPABILITY CHECK ON USB4 HOST ROUTER/S AND xHCI HOST CONTROLLER/S (WINDOWS OS).....	18
2. USB4 DEVICE INTEROPERABILITY TEST STEPS.....	20
2.1. DEVICE INTEROPERABILITY TESTS.....	20
2.1.1. <i>USB4 Host ↔ UUT (USB4 Device Under Test) Topology</i>	20
2.1.2. <i>TBT3 Host ↔ UUT (USB4 Device Under Test) Topology</i>	22
2.1.3. <i>USB4 Host ↔ USB4 Hub ↔ UUT (USB4 Device Under Test) Topology</i>	23
2.1.4. <i>USB4 (5 Hops) Interop Tree Topology</i>	24
2.2. OPERATING POWER MEASUREMENT	25
2.3. USB4 PERIPHERAL DEVICES BACKWARD COMPATIBILITY	27
2.4. BILLBOARD REQUIREMENT	28
2.5. USB4 DEVICE FUNCTIONAL TESTING	29
2.5.1. <i>Multiple Cycle Testing</i>	29
2.5.2. <i>BIOS Testing</i>	30

2.5.3.	<i>Multiple UUT (See Figure 2-5)</i>	31
3.	USB4 HOST INTEROPERABILITY	33
3.1.	HOST INTEROPERABILITY TESTS	33
3.1.1.	<i>UUT (USB4 Host Under Test) ↔ USB4 Device/s</i>	33
3.1.2.	<i>UUT ↔ USB4 Devices and TBT3 Device</i>	35
3.1.3.	<i>UUT (USB4 Host Under Test) ↔ USB4 Hub ↔ USB4 Device Topology</i>	36
3.1.4.	<i>UUT (USB4 Host Under Test) ↔ USB4 Hub ↔ TBT3 Dock (with Multiple Devices)</i>	37
3.1.5.	<i>USB4 (5 Hops) Interop Tree Topology</i>	38
3.1.6.	<i>Boot from USB4 Storage Device with OS</i>	39
3.2.	HOST TO HOST COMMUNICATION	41
3.2.1.	<i>UUT (USB4 Host Under Test) ↔ USB4 Host</i>	41
3.2.2.	<i>UUT (USB4 Host Under Test) ↔ TBT3 Host</i>	41
3.3.	USB4 HOST SYSTEMS BACKWARD COMPATIBILITY	43
3.4.	USB4 HOST FUNCTIONAL TESTING	44
3.4.1.	<i>Multiple Cycle Testing</i>	44
3.4.2.	<i>BIOS Testing</i>	45
3.4.3.	<i>Multiple USB4 Devices (UUT with 2 or more DFP, see Figure 3-9)</i>	46
4.	USB4 EXTERNALLY POWERED HUB/DOCK INTEROPERABILITY	48
4.1.	HUB/DOCK INTEROPERABILITY TESTS	48
4.1.1.	<i>USB4 Host ↔ UUT (USB4 Hub Under Test) ↔ USB4 Device Topology</i>	48
4.1.2.	<i>USB4 Host ↔ UUT (USB4 Hub Under Test) ↔ USB4 Devices Topology</i>	51
4.1.3.	<i>USB4 Host ↔ UUT (USB4 Hub Under Test) ↔ TBT3 Dock (with Multiple Devices)</i>	53
4.1.4.	<i>TBT3 Host ↔ UUT ↔ TBT3 Device</i>	54
4.1.5.	<i>USB4 (5 Hops) Interop Tree Topology</i>	54
4.2.	HOST TO HOST COMMUNICATION WITH USB4 HUB/DOCK IN BETWEEN	56
4.2.1.	<i>USB4 Host ↔ UUT (USB4 Hub Under Test) ↔ USB4 Host</i>	56
4.2.2.	<i>USB4 Host ↔ UUT (USB4 Hub Under Test) ↔ TBT3 Host</i>	56

4.3.	POWER MEASUREMENT.....	58
4.4.	USB4 HUBS ENHANCED SUPERSPEED FUNCTION BACKWARD COMPATIBILITY	60
4.5.	BILLBOARD REQUIREMENT	61
4.6.	ADDITIONAL TESTING FOR USB4 DOCK	62
4.6.1.	<i>TBT3 Host ↔ UUT (USB4 Dock Under Test) ↔ TBT3 Device</i>	62
4.7.	USB4 HUB/DOCK FUNCTIONAL TESTING	64
4.7.1.	<i>USB4 Hub/Dock Multiple Cycle Testing</i>	64
4.7.2.	<i>BIOS Testing</i>	64
4.7.3.	<i>Multiple UUT (USB4 Hub Under Test, UFP and DFP)</i>	65
APPENDIX A	INTEROPERABILITY TEST STEPS	68
A.1	USB4 INTEROP TREE (5 HOPS) TOPOLOGY AND CONCURRENT OPERATION OF ALL DEVICES IN THE TREE.....	68
A.2	INTEROPERABILITY TREE CONCURRENT OPERATION	71
A.3	ALL DEVICES TESTS – INTEROPERABILITY TEST STEPS	72
A.1.1	<i>Inactive Detach & Reattach</i>	72
A.1.2	<i>Active Detach & Reattach</i>	72
A.1.3	<i>Sleep/Wake</i>	73
A.1.4	<i>Hibernate/Resume</i>	74
A.1.5	<i>Restart</i>	76
A.1.6	<i>Shutdown/Power On</i>	76
APPENDIX B	DRIVER VERIFIER FOR OPERATING SYSTEMS	77
B.1	LIST OF DRIVERS FOR WINDOWS 11	77
B.2	LIST OF DRIVERS FOR MACOS.....	80
B.3	LIST OF DRIVERS FOR ANDROID OS	80
B.4	LIST OF DRIVERS FOR CHROME OS	80
APPENDIX C	DEVICE ENUMERATION/REMOVAL VERIFICATION	81

SUMMARY OF CHANGES

Revision:	Author:	Section:	Change:
1.0	Sydney Fernandes	All	First Release
1.01	Sydney Fernandes	2.5, 3.4, 4.7 A1.3, 1.4	Removed NVM Update subsection Clarified USB4 Device Function Wake
1.02	Sydney Fernandes	Appendix A Appendix B	Added additional Test for USB4 Device with DP Out Adapter and USB4 Hub/Dock. Updated from Windows 10 to Windows 11
1.03	Sydney Fernandes		Updates with: 80G Active and Passive Cables UHBR20 monitor USB4 Devices, Hubs, and Host (with USB3 Gen X and USB3 Gen T Tunneling) Removed same OS requirement for Host to Host Communication and Host – Hub – Host Communication Removed Hibernate mode method in macOS (sudo pmset -a hibernatemode 25) Removed TBT3 Compatibility requirement for Upstream Facing Ports of USB4 Dock Clarified USB4 Device Operating Power and Billboard requirements (reference USB Type-C Specification)
1.04	Sydney Fernandes		Added USB4 Dock with USB3 Gen T Tunneling in the equipment section
1.05	Sydney Fernandes	1.8 and 3.1	Added D3 power capability check for Windows USB Hosts Under Test

RELATED DOCUMENTS

Note: Latest versions of the documents and installers can be downloaded from www.usb.org website.

USB Type C Functional Test Specification

USB Type-C Product Test Matrix

USB Type-C and Power Delivery Source Power Requirements Test Specification

USB Power Delivery Tests

xHCI Interoperability Test Procedures For Peripherals, Hubs and Hosts

(Legacy, USB Type-C and Power Delivery)

USB 3.2 Link Layer Test Specification

USB 3.2 Test Matrix

USB4 CV and USB3 CV(Compliance Test Specs included with Installers)

USB4 Specification

USB 3.2 Specification

USB 2.0 Specification

USB Power Delivery Specification

USB Type-C Specification

Terms and Abbreviations

Terms/Abbreviations	Description
Active Cable	A cable with additional electronics to condition the data path signals.
Driver Verifier	Driver Verifier can subject Windows OS drivers to a variety of stresses and tests to find improper behavior.
Hibernate	For interop testing Hibernate is a system low power state in which all the contents of memory are written to a file on the primary system drive: <u>Windows OS:</u> Hibernate can be enabled in the Start menu.
KGD	Known Good Device.
KGH	Known Good Hub.
OS	Operating System.
Passive Cable	A cable that does not incorporate any electronics to condition the data path signals.
Shutdown	For interop testing this general term covers all flavors of Shutdown: <u>Windows OS:</u> Hybrid Shutdown (Fast Startup) and Shutdown.
Sleep	For interop testing this general term covers all flavors of sleep (low power mode) across various operating systems: <u>Windows OS:</u> Sleep, Hybrid Sleep, Modern Standby. <u>Mac OS:</u> Sleep, Safe Sleep, Power Nap.
TBT3	Thunderbolt™ 3.
UUT	Unit Under Test. This is a general term and can be used for Device Under Test, Host Under Test, Dock Under Test, or Hub Under Test.

1. Interoperability Testing

Interoperability testing makes use of an arrangement of Host, Hubs, and Devices known as the Interop Tree. Interoperability testing covers several areas including demonstrated operation and the device's ability to operate and coexist with other devices. It also provides insight into usability issues of the device and the associated software.

The Interoperability test procedure is generic and should be applicable to the vast majority of devices. This document cannot cover all possible types, configurations and combinations of devices, hubs, hosts and docks. Thus, the application of the Interoperability test procedures may need to be modified in order to adequately test a unit for USB compliance. Test guidelines for unique devices that do not fall into categories outlined in this document should be brought to the attention of TechAdmin@usb.org for assistance.

Where features are listed as optional for a product, interoperability testing will either verify that the feature is either functional (if feature is supported) or that the product obeys the "no silent failure" rule (if feature is not supported).

1.1. Equipment

Note that the equipment listed, the test procedure steps, and the actual list of required tests are expected to change periodically. Please refer to www.usb.org website for the latest updates to the USB4 Interoperability test procedures.

Item	Description/Model	Recommended Qty
USB4 Host System	A computer (for example a Desktop Tower) containing an available slot for a Certified USB4 Host Card or an integrated Certified USB4 Host (for example, Phone/Tablet/Laptop, etc.) Note: USB4 Host used for testing devices and docks must ideally support the following: • USB3 Tunneling (USB3 Gen T and USB3 Gen X Tunneling) • DisplayPort Tunneling (supports UHBR 20) • PCIe Tunneling • Thunderbolt 3 Compatible • DP Alternate Mode • 80G USB4 Operation • Gen 4 Asymmetric Link	1+
USB4 Hub	Certified USB4 externally-powered hub with at least 3 downstream facing ports and Billboard Device	5+
USB4 Dock with USB3 Gen T Tunneling	Certified USB4 Dock with USB3 Gen T Tunneling	5+
TBT3 Display Monitor	Certified 5K Thunderbolt 3 Display Monitor	2+
DP Alt-Mode Monitor	Certified 4K (HBR3) DisplayPort Display Monitor Certified UHBR20 DisplayPort Display Monitor	2+ 2+
TBT3 Device	Certified TBT3 Storage Device	1+
TBT3 Host	Certified TBT3 Host	1+

TBT3 Cable	Certified TBT3 Maximum Length Cables Types of cables: • Passive 20G (2m) • Active 40G (2m)	2+ EA
USB4 Device with PCIe Function	Certified USB4 Device with PCIe function (USB4 PCIe Box with x16 slot for xHCI PCIe Card, PCIe Network Adapter Card, PCIe NVMe card with NVMe SSD)	2+
USB4 80 Gbps Device	Certified 80 Gbps Device with ESS Function	2+
USB4 40 Gbps Device	Certified 40 Gbps Device with ESS Function	2+
USB4 Device with USB3 GenT Tunneling	Certified USB4 Device with USB3 GenT Tunneling	2+
USB 3.2 Gen 2x1 hub (externally-powered)	Certified USB 3.2 Gen 2x1 externally-powered hub with at least 4 downstream ports	1+
HS hub w/MTT (externally-powered)	Certified USB externally-powered, high-speed hub with multiple TTs and at least 4 downstream ports	1+
HS hub(externally-powered)	Certified USB externally-powered, high-speed hub with at least 4 downstream ports	1+
USB 3.2 Gen 2x1 MSC Device	Certified USB 3.2 Gen 2x1 MSC Device compliant with the Mass Storage Class	1+
USB 3.2 video camera	Certified USB 3.2 video camera	1+
HS video camera	Certified HighSpeed USB video camera compliant with the Video Class	1+
HS drive	Certified USB high-speed mass storage device compliant with the Mass Storage Class	1+
Mouse	Certified USB low-speed mouse compliant with the Human Interface Device (HID) Class	1+

USB4 Cable	Certified USB4 Maximum Length Cables Types of cables: • Passive 80G • Passive 40G • Passive 20G • Active 80G • Active 40G • Active 20G	8+ EA Type
One meter USB 3.2 Gen2 USB cable	Certified USB 3.2 Gen2 cable assembly	2+
Five meter HS USB cable	Certified USB 2.0 high-speed cable assembly	2+
Keyboard	Certified USB keyboard	1+

The Interop Tree consists of USB-IF certified, off-the-shelf, consumer devices. The tree uses either captive cables on the certified devices, or certified cables to connect the devices. The USB-IF does not identify specific makes and models of USB peripherals for the Interop Tree. Given the very short shelf-life of most consumer products, it is not practical to maintain a list of specific products for the Interop Tree. Thus, the choice of Certified USB products is the responsibility of the tester.

To verify whether a device is certified, go to the USB-IF Integrators List (www.usb.org). Unfortunately, there are numerous uncertified products that illegally display the Certified USB Logo, so please verify that the product is on the Integrators List. Should the tester find an uncertified product displaying the Certified USB Logo, please report the violation to the USB-IF.

At the time of this document's creation, there are not yet Certified USB4 hubs or Certified USB4 peripheral devices. Any Certified USB4 hub or peripheral device that is required for this testing procedure and not yet prevalent in the ecosystem may be substituted with an equivalent known good USB4 hub or USB4 peripheral device.

It is highly recommended that vendors expand in-house interoperability testing to include many more devices, hubs, hosts, docks and cables than the minimum required for the USB4 Interop Tree.

The following guidelines will help to select an appropriate product for the USB4 Interop Tree:

All Devices:

- All devices in the Interop Tree must allow System Sleep and Hibernation while they are active. Any device that does not allow System Sleep or Hibernation may not be included in the USB4 Interop Tree.

USB4 Host System:

- The system must be a high performance computer that can handle multiple audio, video devices.
- The motherboard needs to have an available slot to add the USB4 Host Card or have the USB4 Host integrated on the motherboard.
- A fast multiple core processor is required.
- Memory and disk storage should be sufficiently large to reduce performance degradation.
- The machine must support Sleep and Wake
- The machine must support Wake from PCI Express or Wake from PCIe Card.

USB Hubs in Interop Tree (USB4 Hubs, USB 3.2 Hubs, USB 2.0 Hubs):

- The USB4 Interop Tree can have up to 6 levels meaning a USB4 Device can be up to 5 Hops away from the USB4 Host along the spanning tree. The USB4 Hubs and Devices must contain a Billboard Device.
- The USB 3.2 hubs, and USB 2.0 hubs are required to be externally-powered, while the compound keyboards are required to be bus-powered. This is to ensure the Interop Tree exercises both externally-powered and bus-powered hubs.

1.1.1. Equipment Setup

Ensure that the latest BIOS and driver updates are installed for the motherboard by visiting the vendor's product support website.

1.2. Software Requirements

For Interoperability tests, users are strongly encouraged to test with different operating systems such as: Windows, macOS, Chrome OS, Android, iOS, Linux, etcetera. This document does not detail setup for the various operating systems. Covering setups of all flavors of operating systems is beyond the scope of the interop procedure document.

Testing must be performed on a new and clean installation of the operating system. Instead of formatting the drive and installing the OS before every test run, using a disk imaging utility to restore a copy of a clean OS is acceptable.

A means of testing data integrity for data transfer to/from the mass storage device is required.

Both Large (2GB+ file) and Small Files (30MB+ file) are required for the data transfers in Interoperability tests.

1.3. USB4 Host Controller Driver Installation

1. Ensure that the USB4 Host System has a clean install of the OS. Turn off the Host System and install the USB4 Host controller into the Host System if it is not already integrated.
2. Power on the USB4 Host System.
3. The OS should automatically install the USB4 Host controller driver.

1.4. Enumeration and Driver Installation for Device/s

1. Do not install any drivers or software for any device prior to attaching the UUT (USB4 Device)/Interop Tree to the USB4 Host Controller.
2. Attach the UUT (USB4 Device) to any port on the USB4 Host Controller.
3. Follow the vendor-recommended driver installation procedure.

1.5. USB4 Interoperability Logistical Overview

Effectively, **Interoperability is a consumer experience test of the product.** It examines the product's ability to function correctly in normal system configurations. The following discussion is the rationale for the Interoperability tests so that the procedures can be modified to adequately test a product for compliance.

Because the primary features of USB4 are its "hot-plugging" and "plug and play" capabilities, the dynamic attachment of a USB4 Device and Hub is a tenet of USB4 certification for Devices, Hubs and Hosts. All USB4 capable hosts, hubs and devices must be able to operate correctly on attachment and re-attachment of the device and/or hub. After the testing system is identified as a stable environment before running test, if any enumeration attempt fails, the test must be recorded as a fail.

No Silent Failure rule – USB4 devices are not allowed to appear broken without providing feedback to the consumer about the cause of the problem and how to correct. Thus, compliance enforces a "no silent failure" rule on hosts, hubs and devices in special

situations where the device appears broken. Typically, the "no silent failure" is implemented when the device/hub is not supported by the host, there is insufficient bandwidth on the bus for the device to operate, or there is insufficient power available. When implemented, the message must appear on the host machine and not just in documentation. There must be enough information for the Operating System to understand why the device does not work. In other words, a USB4 device is never to appear broken without justification to the Operating System.

Consumer experience is the most important factor when assessing a Pass or Fail result. If the test result yields any kind of negative consumer experience, the test must be recorded as a fail.

1.6. Pre-Test Requirements

A vendor must do the following before submitting a product for USB4 compliance:

- Run the Multiple Cycle Tests for 1000 iterations and provide test logs. The UUT must pass each iteration of each test. Multiple Cycle Tests are defined in Section 2.5.1 for a USB4 Device, Section 3.4.1 for a USB4 Host, and Section 4.7.1 for a USB4 Hub or Dock.

Note: vendor is required to submit test logs when registering for USB4 certification

1.7. Interoperability Testing for Unit Under Test (UUT) with and without External Power

For all Externally Powered Unit Under Test (UUT):

Disconnect the external power supply from the UUT's external power port and check if it enumerates.


If the UUT enumerates with the external power supply disconnected, then UUT needs to be tested in both configurations for Interop:

- **Interoperability Configuration 1:** Run all Interoperability Tests with External Power Supply **Connected** to the UUT.
- **Interoperability Configuration 2:** Repeat all Interoperability Tests with External Power Supply **Disconnected** from the UUT.

1.8. D3 Power Capability Check on USB4 Host Router/s and xHCI Host Controller/s (Windows OS)

On USB Host/s Under Test, check **D3** power capability is enabled on every sample submitted for certification testing:

1. Open **Device Manager**, and locate USB 3.x and USB4 hosts under test (see screenshot below):

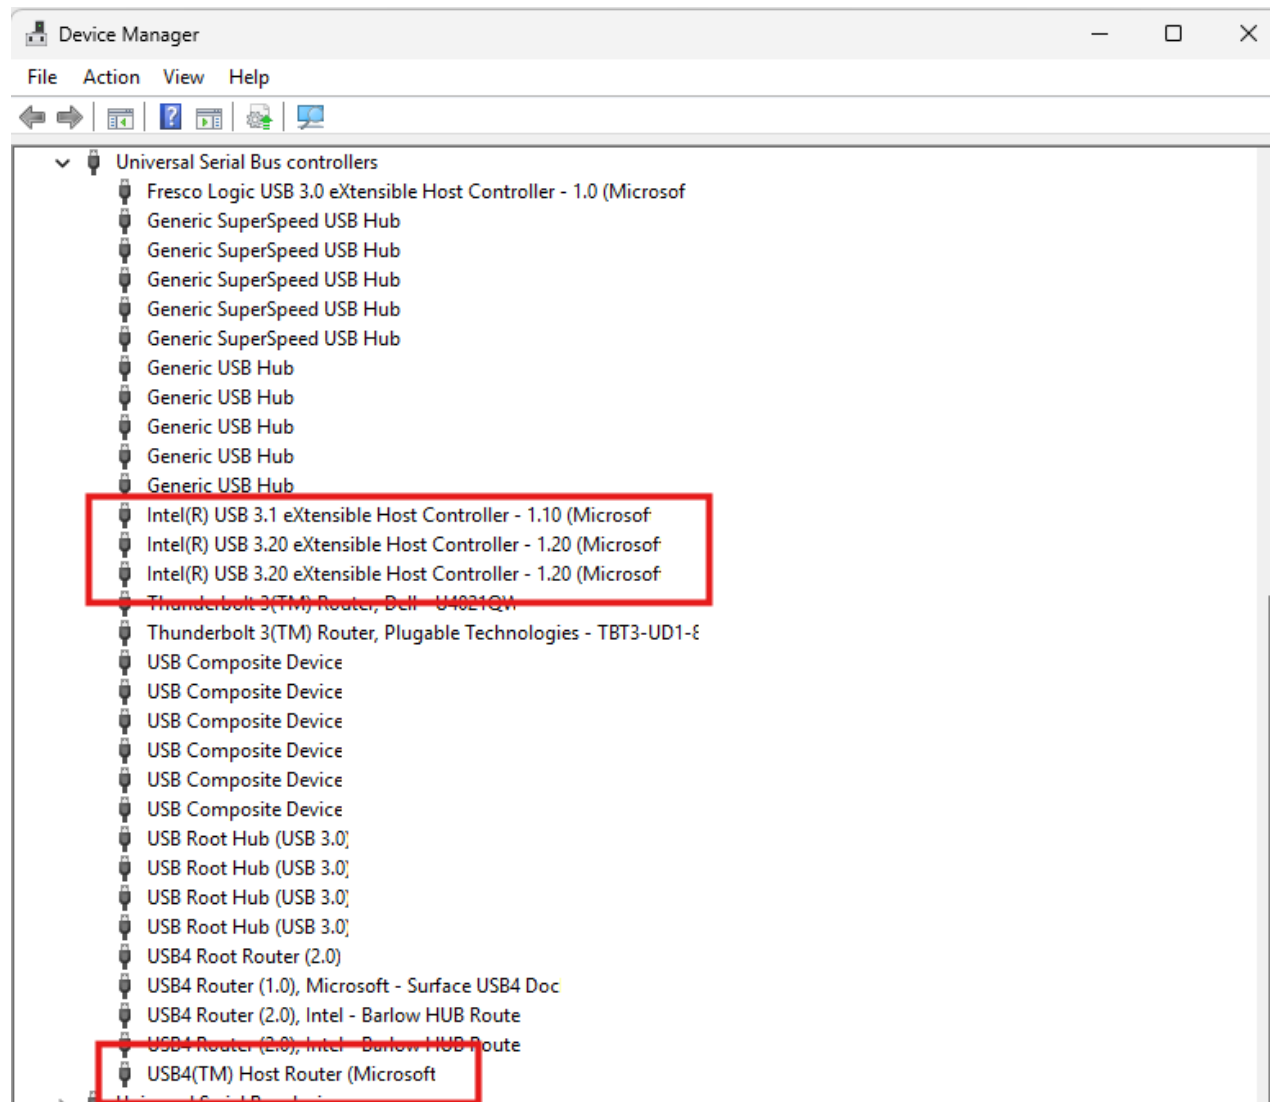

2. Right-click on each USB 3.x Host Controllers and USB4 Host Routers to select the '**Properties**' option.
3. Select the **Details** tab, locate the "**Power data**" property, and examine the value to confirm all USB hosts under test support D3:


Under **Power Capabilities**, the following must be listed for each USB Host:

PDCAP_D3_SUPPORTED

PDCAP_WAKE_FROM_D3_SUPPORTED

See example screenshots below to verify D3 Support

(PDCAP_D3_SUPPORTED & PDCAP_WAKE_FROM_D3_SUPPORTED)

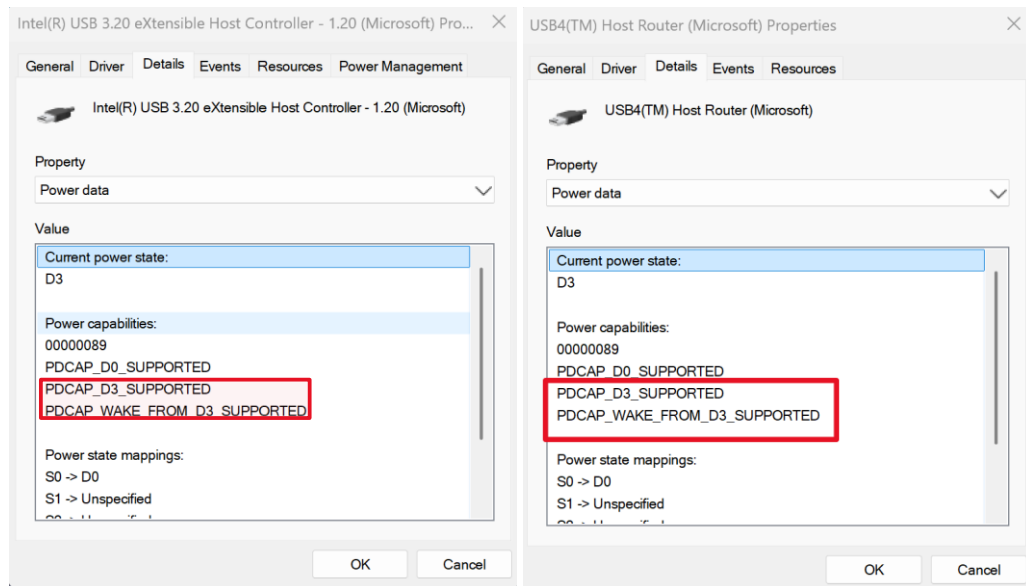

Pass:

USB Hosts Under Test support D3 (Note: Both **PDCAP_D3_SUPPORTED** and **PDCAP_WAKE_FROM_D3_SUPPORTED** must be listed in **Power Capabilities** for **D3 Power State**)

Fail:

USB Hosts Under Test do not support D3

2. USB4 Device Interoperability Test Steps

2.1. Device Interoperability Tests

A USB4 device can be up to 5 hops away from the USB4 Host along the Interop tree.

2.1.1. USB4 Host ↔ UUT (USB4 Device Under Test) Topology

Connect the UUT (USB4 Device) to the USB4 host using a USB4 Cable as shown in Figure 2-1.

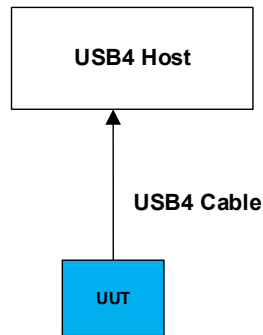


Figure 2-1: USB4 Host ↔ UUT (USB4 Device Under Test) Topology

2.1.1.1. Peripheral Enumeration and Driver Installation for UUT

Note: Refer to section 1.3 and 1.4 to install drivers for UUT.

Pass:

- Device enumerates
- AND
- Drivers are installed either automatically or through the vendor-recommended install procedure
- AND
- System does not require a reboot (unless required by the OS)
- AND
- DUT is correctly identified by OS and there are no silent failures
- AND

- (Software installs without any software crashes
OR
- No software required)

Fail:

- Any device cannot be installed because it requires driver installation or application software BEFORE the device is ever plugged in
OR
- Any device does not enumerate or system software/OS crashes during enumeration
OR
- System requires a reboot
OR
- Any device is incorrectly identified by Device Manager or any device is flagged as not operational
OR
- Installation software crashes

2.1.1.2. All Devices Tests – Interoperability Test Steps

- Run Test Steps A.1.1 - A.1.6 as specified in Appendix A.
- Repeat with all USB4 cable types (see Section 1.1).

Pass:

- Tests A.1.1 - A.1.6 in Appendix A PASS

Fail:

- Any of tests A.1.1 - A.1.6 in Appendix A FAIL

2.1.2. TBT3 Host ↔ UUT (USB4 Device Under Test) Topology

Connect the UUT to TBT3 host using a USB4 Cable as shown in Figure 2-2.

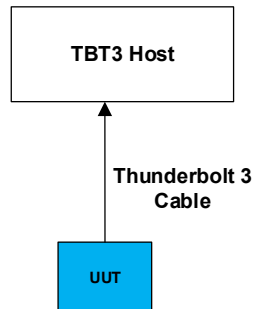


Figure 2-2: TBT3 Host ↔ UUT (USB4 Device Under Test) Topology

2.1.2.1. All Devices Tests – Interoperability Test Steps

- Run Test Steps A.1.1 - A.1.6 as specified in Appendix A.
- Repeat with all TBT3 cable types (see Section 1.1).

Pass:

- Tests A.1.1 - A.1.6 in Appendix A PASS

Fail:

- If any of tests A.1.1 - A.1.6 in Appendix A FAIL

2.1.3. USB4 Host ↔ USB4 Hub ↔ UUT (USB4 Device Under Test) Topology

Connect the DUT in a topology as shown in Figure 2-3.

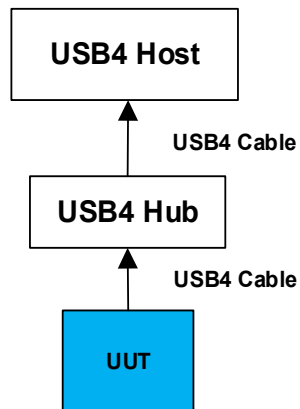


Figure 2-3: USB4 Host ↔ USB4 Hub ↔ UUT (USB4 Device Under Test) Topology

2.1.3.1. All Devices Tests – Interoperability Test Steps

- Run Test Steps A.1.1 - A.1.6 as specified in Appendix A.
- Repeat with all USB4 cable types (see Section 1.1).

Pass:

- Tests A.1.1 - A.1.6 in Appendix A PASS

Fail:

- If any of tests A.1.1 - A.1.6 in Appendix A FAIL

2.1.4. USB4 (5 Hops) Interop Tree Topology

Construct the Interop tree as specified in Appendix A.

2.1.4.1. All Devices Tests – Interoperability Test Steps

- Run tests A.1.1 - A.1.6 as specified in Appendix A.
- Repeat tests with all types of USB4 cables (see Section 1.1).

Pass:

- All Interop Tree devices operate correctly

Fail:

- One or more Interop Tree devices fail to operate correctly

2.2. Operating Power Measurement

Operating Power Measurement test needs to be run for all Device Under Test.

1. Connect a Power Measurement Fixture between UUT and USB4 host as shown in Figure 2-4.
2. Operate the device such that it's functioning in its maximum power consumption mode for long enough to capture a peak measurement.
3. Capture the power measurements and analyze the maximum power consumption wattage, for the period of operation.

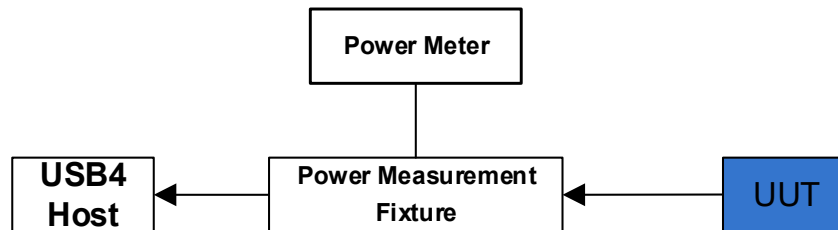


Figure 2-4: Device Power Consumption Measurement Topology

Pass:

- Power consumed by the UUT from the USB4 host is less than equal to 7.5W when connected to a source that delivers 7.5W (Note: USB4 devices shall be minimally capable of operating with a Source that only delivers up to 7.5 W (i.e., 5 V @ 1.5 A).
- In cases where the full functional capabilities or the highest performance of the USB4 device requires more than the power being offered by the host, the device shall be minimally capable of **providing the user with basic functionality** as expected for the type and listed functions of the device. This allows for making available a higher level of operation or performance when a higher level of power is supplied, e.g., 15 W for full functionality versus 7.5 W for basic functionality. In this case, the device **shall expose a USB Billboard Device Class** if the device is unable to provide equivalent functionality limited by the available power.

Fail:

- Power consumed by the UUT from the USB4 host is greater than 7.5W when connected to a source that delivers 7.5W.
- Device does not expose USB Billboard Device Class (if the device is unable to provide equivalent full functionality or highest performance limited by the available power). **Note (per USB Type-C Specification):** In cases where the full functional capabilities or the highest performance of the USB4 device requires more than the power being offered by the host, the device shall be minimally capable of **providing the user with basic functionality** as expected for the type and listed functions of the device. This allows for making available a higher level of operation or performance when a higher level of power is supplied, e.g., 15 W for full functionality versus 7.5 W for basic functionality. In this case, the device **shall expose a USB Billboard Device Class** if the device is unable to provide equivalent functionality limited by the available power.

For Externally Powered Devices:

1. Connect a Power Measurement Fixture between UUT and USB4 host as shown in Figure 2-4.
2. Capture the power measurements and analyze.
3. Unplug the External Power Supply to the device and capture power measurement.

Pass:

- For Externally Powered UUT (with External Power Supply unplugged from the UUT), power consumed by the UUT from the host port is less than or equal to 10 mW
- For Externally Powered UUT (with External Power Supply plugged into the UUT), power consumed by the UUT from the host port should be 0 mW

Fail:

- For Externally Powered UUT (with External Power Supply unplugged from the UUT) power consumed by the UUT from the host port is greater than 10 mW
- For Externally Powered UUT (with External Power Supply plugged into the UUT), power consumed by the UUT from the host port is greater than 0 mW

2.3. USB4 Peripheral Devices Backward Compatibility

All USB4 devices with Enhanced SuperSpeed Function will need to be compliant to USB 3.2 Certification Requirements.

DP Multi-function capability of devices is required to be tested as part of USB 3.2 Certification Requirements.

2.4. Billboard Requirement

A USB4 Device must present a Billboard Device in the following cases:

- When the USB4 Device (e.g. PCIe Endpoint, DisplayPort Source or Sink, etcetera) does not have an equivalent Enhanced SuperSpeed Function.
- When the USB4 Device is not Thunderbolt 3 compatible and it is connected to a Thunderbolt 3 Host.

A Billboard Device informs the end-user and complies with the “No Silent Failure” Rule. The Billboard Device must adhere to the USB 2.0/3.2 Compliance Requirements.

2.5. USB4 Device Functional Testing

2.5.1. Multiple Cycle Testing

1. Connect the UUT to USB4 host using a USB4 Cable as shown in Figure 2-1.
2. Run tests A.1.1, and A.1.3 - A.1.6 (as specified in Appendix A) 10 times. Each test must be performed a total of 10 times. For each cycle verify that the UUT enumerates.

2.5.2. BIOS Testing

Note: The tests in this section are only run if the USB4 hosts supports a pre-OS environment.

2.5.2.1. Inactive Detach/Reattach

1. Power on USB4 Host.
2. Boot to pre-OS environment (e.g. EFI shell).
3. Connect the UUT to a USB4 Host as shown in Figure 2-1.
4. Verify UUT enumeration.
5. Unplug the UUT.
6. Verify UUT removal.

2.5.2.2. Restart

1. Connect the UUT to a USB4 Host as shown in Figure 2-1.
2. Power on USB4 Host.
3. Verify UUT enumeration.
4. Restart USB4 Host.
5. Boot to pre-OS environment (e.g. EFI shell).
6. Verify UUT enumeration.

2.5.2.3. Shutdown/Power On

1. Connect the UUT to a USB4 Host as shown in Figure 2-1.
2. Power on USB4 Host.
3. Boot to pre-OS environment (e.g. EFI shell).
4. Verify UUT enumeration.

2.5.3. Multiple UUT (See Figure 2-5)

Note: This test requires a USB4 Host with 2 DFP and 2 instances of the UUT (USB4 Devices Under Test)

1. Connect the first UUT to the USB4 Host.
2. Verify that the first UUT enumerates.
3. Connect a second UUT to the USB4 Host.
4. Verify that the second UUT enumerates.
5. Unplug the second UUT.
6. Verify removal of second UUT.
7. Unplug the first UUT.
8. Verify removal of the first UUT.
9. Repeat so test is performed with all of the following:
 - UUT1 plugged→UUT2 plugged→UUT1 unplugged→UUT2 unplugged
 - UUT1 plugged→UUT2 plugged→UUT2 unplugged→UUT1 unplugged
 - UUT2 plugged→UUT1 plugged→UUT1 unplugged→UUT2 unplugged
 - UUT2 plugged→UUT1 plugged→UUT2 unplugged→UUT1 unplugged

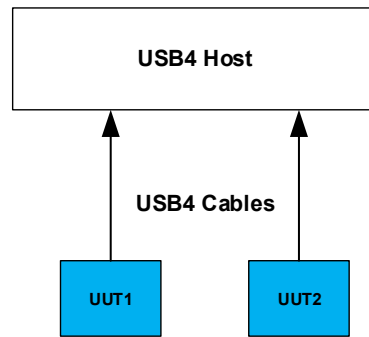


Figure 2-5: USB4 Host ↔ Two UUT (USB4 Devices Under Test) Topology

3. USB4 Host Interoperability

3.1. Host Interoperability Tests

If the system has multiple USB4 hosts built-in, Interoperability should be performed on each host.

Note: On USB Host/s Under Test (Windows OS), check D3 power capability is enabled on every sample submitted for certification testing (see 1.8 page 18 for details).

3.1.1. UUT (USB4 Host Under Test) ↔ USB4 Device/s

Connect a USB4 device on one of exposed ports of the UUT as shown in Figure 3-1.

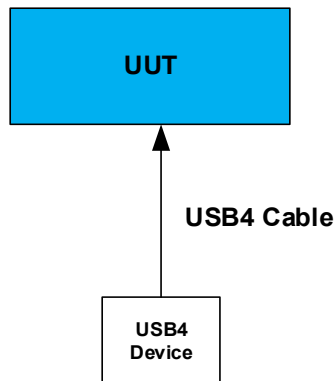


Figure 3-1: UUT (USB4 Host Under Test) ↔ USB4 Device

3.1.1.1. Enumeration and Driver Installation

Refer to section 1.3 and 1.4 to install drivers for USB4 Devices.

Pass:

- Device enumerates

AND

- Drivers are installed either automatically or through the vendor-recommended install procedure

AND

- System does not require a reboot (unless required by the OS)

AND

- DUT is correctly identified by OS and there are no silent failures

AND

- (Software installs without any software crashes

OR

- No software required)

Fail:

- Any device cannot be installed because it requires driver installation or application software BEFORE the device is ever plugged in

OR

- Any device does not enumerate or system software/OS crashes during enumeration

OR

- System requires a reboot

OR

- Any device is flagged as not operational

OR

- Installation software crashes

3.1.1.2. All Devices Tests – Interoperability Test Steps

- Run tests A.1.1 - A.1.6 as specified in Appendix A.
- Repeat this test for each port on the host.

- Repeat this test for each type of USB4 Device (Enhanced SuperSpeed Function (USB3 Gen X and USB3 Gen T Tunneling), PCIe Function, DP Display), Thunderbolt 3 Device, DP Alt-Mode Device, USB4 Dock (with USB3 Gen T Tunneling), USB4 20G Device, USB4 40G Device, USB4 80G Device.
- Repeat tests with all types of USB4 cables (see Section 1.1).

Pass:

- Tests A.1.1 - A.1.6 in Appendix A PASS

Fail:

- If any of tests A.1.1 - A.1.6 in Appendix A FAIL

3.1.2. UUT ↔ USB4 Devices and TBT3 Device

If a USB4 Host has multiple exposed USB4 Ports, then populate all ports with Devices as shown in Figure 3-2. Figure 3-2 shows an example of a USB4 Host with 4 Ports. This setup needs to be modified if the USB4 Host has greater than or less than 4 ports.

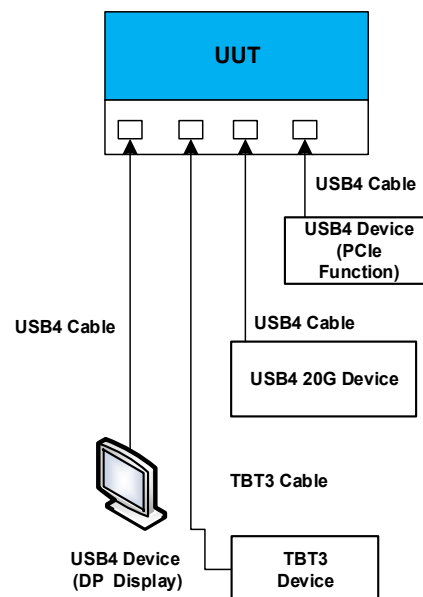


Figure 3-2: Root Port Testing at USB4 Host with Multiple Devices

3.1.2.1. All Devices Tests – Interoperability Test Steps

- Run tests A.1.1 - A.1.6 (as specified in Appendix A) with all devices operating concurrently.
- Repeat this test with a combination of multiple USB4 Devices (Enhanced SuperSpeed Function (USB3 Gen X and USB3 Gen T Tunneling), PCIe Function, DP Display), TBT3 Devices, DP Alt-Mode Device, USB4 Dock (with USB3 Gen T Tunneling), connected on various exposed Host ports to test concurrently.
- Repeat tests with all types of USB4 cables (see Section 1.1).

Pass:

- Tests A.1.1 - A.1.6 in Appendix A PASS

Fail:

- If any of tests A.1.1 - A.1.6 in Appendix A FAIL

3.1.3. UUT (USB4 Host Under Test) ↔ USB4 Hub ↔ USB4 Device Topology

Connect a USB4 device on one of exposed ports of the UUT as shown in Figure 3-3.

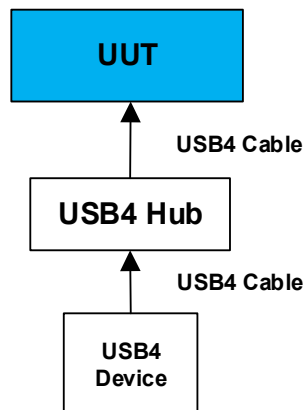


Figure 3-3: UUT (USB4 Host Under Test) ↔ USB4 Hub ↔ USB4 Device Topology

3.1.3.1. All Devices Tests – Interoperability Test Steps

- Run tests A.1.1 - A.1.6 as specified in Appendix A.
- Repeat this test for each port on the host.
- Repeat this test for each type of USB4 Device (Enhanced SuperSpeed Function (USB3 Gen X and USB3 Gen T Tunneling), PCIe Function, DP Display), TBT3 Device, DP Alt-Mode Device, USB4 20G Device, USB4 40G Device, USB4 80G Device, USB 3.2 Device, USB2.0, PCIe Device.
- Repeat tests with all types of USB4 cables (see Section 1.1).

Pass:

- Tests A.1.1 - A.1.6 in Appendix A PASS

Fail:

- If any of tests A.1.1 - A.1.6 in Appendix A FAIL

3.1.4. UUT (USB4 Host Under Test) ↔ USB4 Hub ↔ TBT3 Dock (with Multiple Devices)

Connect a USB4 Hub (with a TBT3 Dock attached on the USB4 Hub downstream facing port) on one of exposed ports of the UUT as shown in Figure 3-4. To the TBT3 Dock attach 2 DisplayPort Monitors, PCIe Storage Device, TBT3 Device and a USB 2.0 and USB 3.2 Devices.

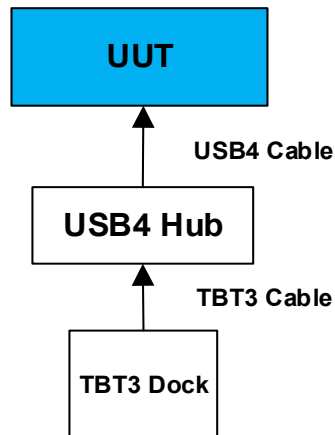


Figure 3-4: UUT (USB4 Host Under Test) ↔ USB4 Hub ↔ TBT3 Dock (with Multiple Devices) Topology

3.1.4.1. All Devices Tests – Interoperability Test Steps

- Run tests A.1.1 - A.1.6 as specified in Appendix A.
- Repeat this test for each port on the host.
- Repeat tests with all types of USB4 and TBT3 cables (see Section 1.1).

Pass:

- Tests A.1.1 - A.1.6 in Appendix A PASS

Note: If the UUT only supports one display, then the first connected monitor must work. If the UUT supports multiple displays, then both connected monitors must work.

Fail:

- If any of tests A.1.1 - A.1.6 in Appendix A FAIL

3.1.5. USB4 (5 Hops) Interop Tree Topology

Construct the Interop tree as specified in Appendix A.

3.1.5.1. All Devices Tests – Interoperability Test Steps

Run tests A.1.1 - A.1.6 as specified in Appendix A.

Repeat tests with all types of USB4 cables (see Section 1.1).

Pass:

- All Interop Tree devices operate correctly

Fail:

- One or more Interop Tree devices fail to operate correctly

3.1.6. Boot from USB4 Storage Device with OS

Connect a USB4 storage device with OS on one of exposed ports of the UUT as shown in Figure 3-5.

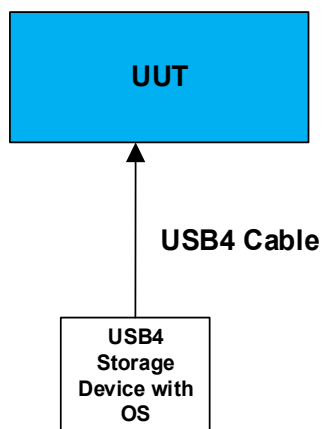


Figure 3-5: UUT (USB4 Host Under Test) ↔ USB4 Storage Device

- Power on the USB4 Host System and Enter BIOS.
- Enable boot from USB4 Device (if not enabled).

- Boot from USB4 storage device and verify the USB4 Host System booted from USB4 Device.
- Restart the USB4 Host System and verify the USB4 Host system booted from the primary drive (local storage).
- Connect a Keyboard to the USB4 Host System, Restart the Host and verify BIOS can be entered using the Keyboard connected to the UUT.

Pass:

- USB4 Host system boots from USB4 Storage Device when configured in the BIOS and BIOS can be entered using a Keyboard attached to the UUT

Fail:

- USB4 Host system does not boot from USB Storage Device or BIOS cannot be entered with Keyboard connected to the UUT, or System fails to reboot from local storage after restart

3.2. Host to Host Communication

3.2.1. UUT (USB4 Host Under Test) ↔ USB4 Host

1. Connect a USB4 Host to the UUT as shown in Figure 3-6.
2. Transfer a file from the UUT to the USB4 host.
3. Verify that the file transfer either completes successfully or displays message (e.g. warning that transfer not supported) to tester.
4. Run tests A.1.1 - A.1.6 as specified in Appendix A.
5. Repeat this test for each DFP of the UUT.

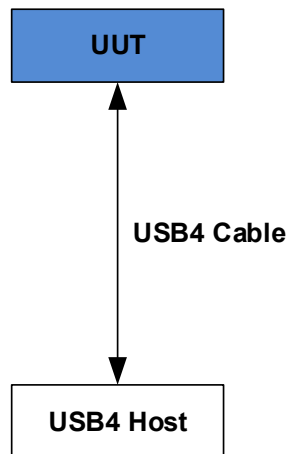


Figure 3-6: Host to Host Communications

3.2.2. UUT (USB4 Host Under Test) ↔ TBT3 Host

1. Connect the USB4 Host to a Thunderbolt 3 Host as shown in Figure 3-7.
2. If UUT does not support TBT3-compatibility:
 - Verify that it displays a message to the tester (e.g. warning that Thunderbolt 3 is not supported)
 - End test here
3. Transfer a file from the UUT to the TBT3 host.

4. Verify that the file transfer either completes successfully or displays message (e.g. warning that transfer not supported) to tester.
5. Run tests A.1.1 - A.1.6 as specified in Appendix A.
6. Repeat this test for each DFP of the UUT.

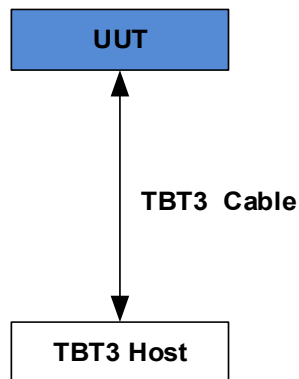


Figure 3-7: USB4 Host to TBT3 Host Communications

3.3. USB4 Host Systems Backward Compatibility

All USB4 Hosts with Enhanced SuperSpeed Function will need to be backward compatible and compliant to USB3.2 Certification Requirements.

DP Multi-function testing of Host ports is required to be tested as part of USB3.2 Certification Requirements.

3.4. USB4 Host Functional Testing

3.4.1. Multiple Cycle Testing

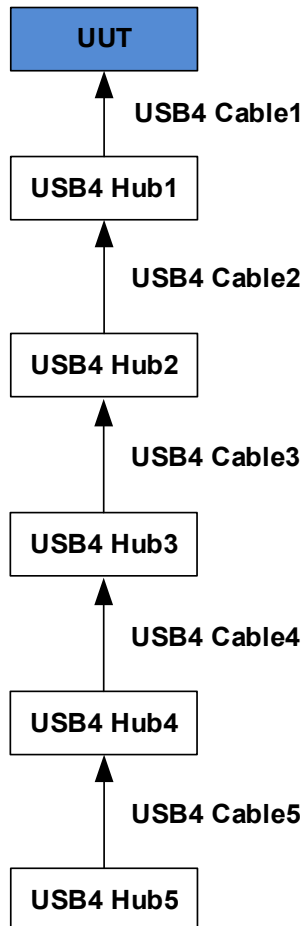


Figure 3-8: UUT (USB4 Host Under Test) connected with 5 USB4 Hubs

1. Connect 5 USB4 Hubs to the UUT as shown in Figure 3-8.
2. Run tests A.1.1, and A.1.3 - A.1.6 (as specified in Appendix A) 10 times i.e. each test must be performed a total of 10 times. For each cycle verify that all USB4 Hubs enumerate.
 - Perform test on each DFP of the UUT, individually.

3.4.2. BIOS Testing

Note: The test in this section are only run if the USB4 hosts supports a pre-OS environment.

3.4.2.1. Inactive Detach/Reattach

1. Power on USB4 Host Under Test.
2. Boot to pre-OS environment (e.g. EFI shell).
3. Connect the USB4 Device to the UUT USB4 Host as shown in Figure 3-1.
4. Verify USB4 Device enumeration.
5. Unplug the USB4 Device.
6. Verify USB4 Device removal.

3.4.2.2. Restart

1. Connect the USB4 Device to the UUT (USB4 Host Under Test) as shown in Figure 3-1.
2. Power on USB4 Host.
3. Verify USB4 Device enumeration.
4. Restart USB4 Host.
5. Boot to pre-OS environment (e.g. EFI shell).
6. Verify USB4 Device enumeration.

3.4.2.3. Shutdown/Power On

1. Connect the USB4 Device to the UUT (USB4 Host Under Test) as shown in Figure 3-1.
2. Shutdown and Power On USB4 Host Under Test.
3. Boot to pre-OS environment (e.g. EFI shell).
4. Verify USB4 Device enumeration.

3.4.3. Multiple USB4 Devices (UUT with 2 or more DFP, see Figure 3-9)

Note: For this test USB4 Device1 and USB4 Device2 need to be identical.

1. Connect the first USB4 Device to the UUT.
2. Verify that the first USB4 Device enumerates.
3. Connect a second USB4 Device to the UUT.
4. Verify that the second USB4 Device enumerates.
5. Unplug the second USB4 Device.
6. Verify removal of second USB4 Device.
7. Unplug the first USB4 Device.
8. Verify removal of the first USB4 Device.
9. Repeat so test is performed with all of the following:
 - USB4 Device1 plugged→USB4 Device2 plugged→USB4 Device1 unplugged→USB4 Device2 unplugged
 - USB4 Device1 plugged→ USB4 Device2 plugged→ USB4 Device2 unplugged→ USB4 Device1 unplugged
 - USB4 Device2 plugged→ USB4 Device1 plugged→ USB4 Device1 unplugged→ USB4 Device2 unplugged
 - USB4 Device2 plugged→ USB4 Device1 plugged→ USB4 Device2 unplugged→ USB4 Device1 unplugged

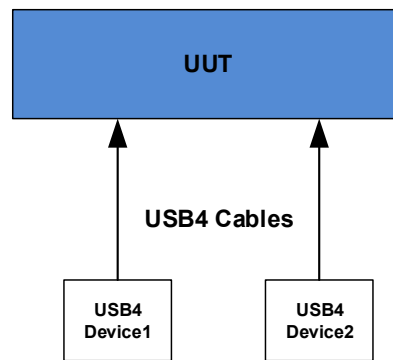


Figure 3-9: UUT↔ Two USB4 Devices Topology

4. USB4 Externally Powered Hub/Dock Interoperability

4.1. Hub/Dock Interoperability Tests

A USB4 Hub consists of one Upstream Facing Port and one or more Downstream Facing Ports typically for the purpose of port expansion. A USB4 device can be up to 5 hops away from the USB4 Host along the Interop tree.

4.1.1. USB4 Host ↔ UUT (USB4 Hub Under Test) ↔ USB4 Device Topology

Connect a USB4 device on one of exposed ports of the UUT (USB4 Hub Under Test) as shown in Figure 4-1.

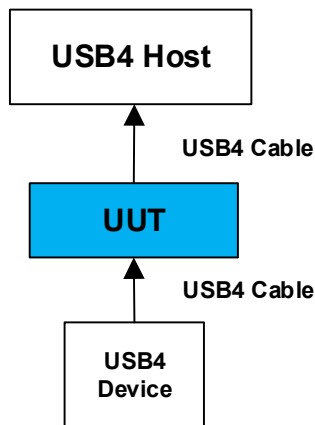


Figure 4-1: USB4 Host ↔ UUT (USB4 Hub Under Test) ↔ DUT Topology

4.1.1.1. Enumeration and Driver Installation

Refer to section 1.3 and 1.4 to install drivers for USB4 Devices

Pass:

- Device enumerates

AND

- Drivers are installed either automatically or through the vendor-recommended install procedure

AND

- System does not require a reboot (unless required by the OS)

AND

- DUT is correctly identified by OS and there are no silent failures

AND

- (Software installs without any software crashes

OR

- No software required)

Fail:

- Any device cannot be installed because it requires driver installation or application software BEFORE the device is ever plugged in

OR

- Any device does not enumerate or system software/OS crashes during enumeration

OR

- System requires a reboot

OR

- Any device is flagged as not operational

OR

- Installation software crashes

4.1.1.2. All Devices Tests – Interoperability Test Steps

- Run tests A.1.1 - A.1.6 as specified in Appendix A.
- Repeat this test for each port on the hub.

- Repeat this test for each type of USB4 Device (Enhanced SuperSpeed Function (USB3 Gen X and USB3 Gen T Tunneling), PCIe Function, DP Display), Thunderbolt 3 Device, DP Alt-Mode Device, USB4 Dock (with USB3 Gen T Tunneling), USB4 20G Device, USB4 40G Device, USB4 80G Device, USB 3.2 Device, USB2.0, PCIe Device.
- Repeat tests with all types of USB4 cables (see Section 1.1).

Pass:

- Tests A.1.1 - A.1.6 in Appendix A PASS

Fail:

- If any of tests A.1.1 - A.1.6 in Appendix A FAIL

4.1.2. USB4 Host ↔ UUT (USB4 Hub Under Test) ↔ USB4 Devices Topology

For the UUT (USB4 Hub Under Test) populate all exposed Down Stream Facing (DSF) ports with Devices as shown in Figure 4-2.

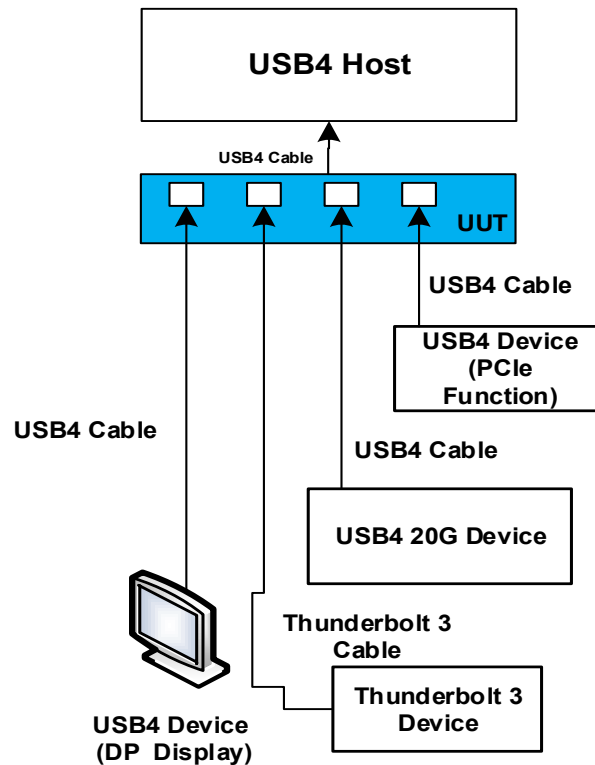


Figure 4-2: UUT (USB4 Hub Under Test) with DFPs Populated with Devices

4.1.2.1. All Devices Tests – Interoperability Test Steps

- Run tests A.1.1 - A.1.6 as specified in Appendix A with all devices operating concurrently.
- Repeat this test with a combination of multiple USB4 Devices (Enhanced SuperSpeed Function (USB3 Gen X and USB3 Gen T Tunneling), PCIe Function, DP Display), Thunderbolt 3 Device, DP Alt-Mode Device, USB4 Dock (with USB3 Gen T Tunneling), USB 3.2, USB 2.0, PCIe devices connected on various exposed Hub ports to test concurrently.
- Repeat tests with all types of USB4 cables (see Section 1.1).

Pass:

- Tests A.1.1 - A.1.6 in Appendix A PASS

Fail:

- If any of tests A.1.1 - A.1.6 in Appendix A FAIL

4.1.3. USB4 Host ↔ UUT (USB4 Hub Under Test) ↔ TBT3 Dock (with Multiple Devices)

Connect a TBT3 dock on one of exposed ports of the UUT (USB4 Hub Under Test) as shown in Figure 4-3. To the TBT3 Dock, attach 2 DisplayPort Monitors, a PCIe Storage Device, a TBT3 Device, a USB 2.0 Device, and a USB 3.2 Device.

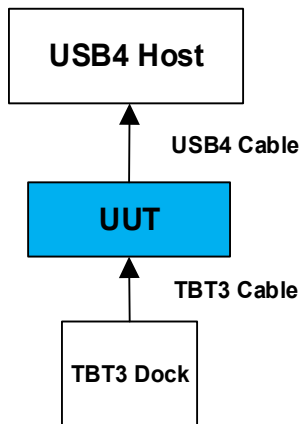


Figure 4-3: USB4 Host ↔ UUT (USB4 Hub Under Test) ↔ TBT3 Dock (with Multiple Devices) Topology

4.1.3.1. All Devices Tests – Interoperability Test Steps

- Run tests A.1.1 - A.1.6 as specified in Appendix A.
- Repeat this test for each port on the Hub Under Test.
- Repeat tests with all types of USB4 and TBT3 cables (see Section 1.1).

Pass:

- Tests A.1.1 - A.1.6 in Appendix A PASS

Fail:

- If any of tests A.1.1 - A.1.6 in Appendix A FAIL

4.1.4. TBT3 Host ↔ UUT ↔ TBT3 Device

Connect a TBT3 device on one of exposed ports of the UUT (USB4 Hub Under Test) as shown in Figure 4-4.

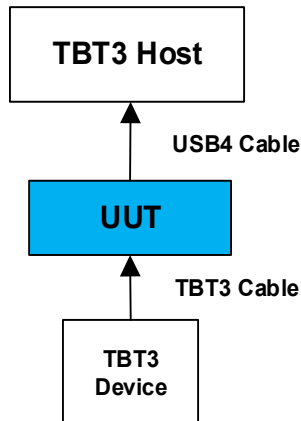


Figure 4-4: TBT3 Host ↔ UUT (USB4 Hub Under Test) ↔ TBT3 Device Topology

4.1.4.1. All Devices Tests – Interoperability Test Steps

- Run tests A.1.1 - A.1.6 as specified in Appendix A.
- Repeat this test for each port on the Hub Under Test.
- Repeat tests with all types of USB4 and TBT3 cables (see Section 1.1).

Pass:

- Tests A.1.1 - A.1.6 in Appendix A PASS

Fail:

- If any of tests A.1.1 - A.1.6 in Appendix A FAIL

4.1.5. USB4 (5 Hops) Interop Tree Topology

Construct the Interop tree as specified in Appendix A.

4.1.5.1. All Devices Tests – Interoperability Test Steps

- Run tests A.1.1 - A.1.6 as specified in Appendix A.
- Repeat tests with all types of USB4 cables (see Section 1.1).

Pass:

- Tests A.1.1 - A.1.6 in Appendix A PASS

Fail:

- If any of tests A.1.1 - A.1.6 in Appendix A FAIL

4.2. Host to Host Communication with USB4 Hub/Dock in between

4.2.1. USB4 Host ↔ UUT (USB4 Hub Under Test) ↔ USB4 Host

1. Connect 2 USB4 Hosts (with a USB4 Hub Under Test in between) as shown in Figure 4-5.
2. Transfer a file from the UUT to the USB4 host.
3. Verify that the file transfer either completes successfully or displays message (e.g. warning that transfer not supported) to tester.
4. Run tests A.1.1 - A.1.6 as specified in Appendix A.
5. Repeat this test for each DFP of the UUT.

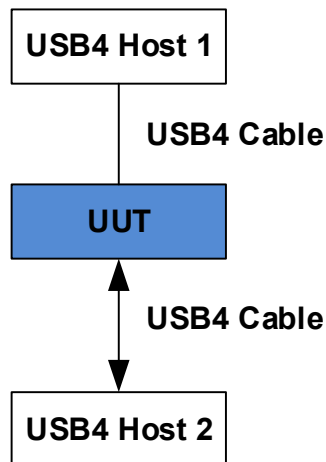


Figure 4-5: USB4 Host-to-Host Communications with a UUT (USB4 Hub Under Test) in Between

4.2.2. USB4 Host ↔ UUT (USB4 Hub Under Test) ↔ TBT3 Host

1. Connect the USB4 Host to a Thunderbolt 3 Host (with a USB4 Hub in between) as shown in Figure 4-6.
2. Transfer a file from the UUT to the TBT3 host.

3. Verify that the file transfer either completes successfully or displays message (e.g. warning that transfer not supported) to tester.
4. Run tests A.1.1 - A.1.6 as specified in Appendix A.
5. Repeat this test for each DFP of the UUT.

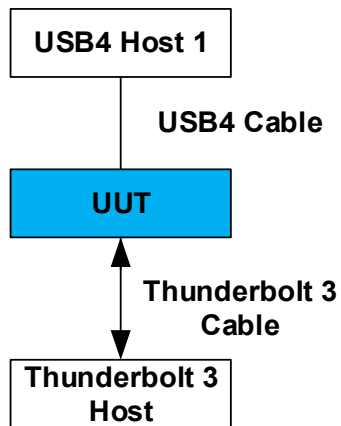


Figure 4-6: USB4 Host to Thunderbolt 3 Host Communications with a UUT (USB4 Hub Under Test) in Between

4.3. Power Measurement

Connect a Power Measurement Fixture between UUT and USB4 host as shown in Figure 4-7.

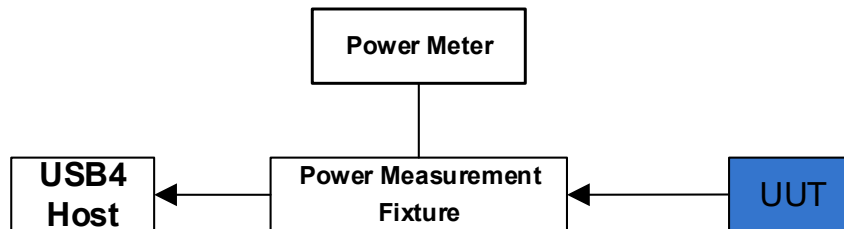


Figure 4-7: UUT (USB4 Hub Under Test) Power Consumption Measurement Topology

For Externally Powered Hubs/Docks:

- Connect a Power Measurement Fixture between UUT and USB4 host as shown in Figure 4-7.
- Capture the power measurements and analyze.
- Unplug the External Power Supply to the device and capture power measurement.

Pass:

- For Externally Powered UUT (with External Power Supply unplugged from the UUT), power consumed by the UUT from the host port is less than or equal to 10 mW
- For Externally Powered UUT (with External Power Supply plugged into the UUT), power consumed by the UUT from the host port should be 0 mW

Fail:

- For Externally Powered UUT (with External Power Supply unplugged from the UUT) power consumed by the UUT from the host port is greater than 10 mW
- For Externally Powered UUT (with External Power Supply plugged into the UUT), power consumed by the UUT from the host port is greater than 0 mW

4.4. USB4 Hubs Enhanced SuperSpeed Function Backward Compatibility

All USB4 Hubs with Enhanced SuperSpeed Function will need to be backward compatible and compliant to USB 3.2 Certification Requirements.

DP Multi-function capability of Hub/Dock Upstream and Downstream Facing Ports is required to be tested as part of USB 3.2 Certification Requirements.

4.5. Billboard Requirement

A USB4 Hub must present a Billboard Device in the following case:

- When the USB4 Hub UFP is not Thunderbolt 3 compatible and it is connected to a Thunderbolt 3 Host.

A Billboard Device informs the end-user and complies with the “No Silent Failure” Rule. The Billboard Device must adhere to the USB 2.0/3.2 Compliance Requirements.

4.6. Additional Testing for USB4 Dock

A USB4 Dock combines a USB4 hub (including at least one exposed USB Type-C downstream port) with additional capabilities that either expose other connector types and/or include other user-visible functions, e.g. storage, networking, etc. An example of functions that are not considered user-visible include firmware update or device authentication.

Note: For a USB4 Dock, the testing requirements for both USB4 Hub and Device Functions apply. All functions in the USB4 Dock must be completely tested along with devices attached to the USB4 Hub downstream facing ports. Furthermore, the Interoperability tree in Chapter 5 will need to be modified based on the number of exposed downstream facing ports on the USB4 Dock.

4.6.1. TBT3 Host ↔ UUT (USB4 Dock Under Test) ↔ TBT3 Device

Connect a TBT3 device on one of exposed ports of the UUT (USB4 Dock Under Test) as shown in Figure 4-8.

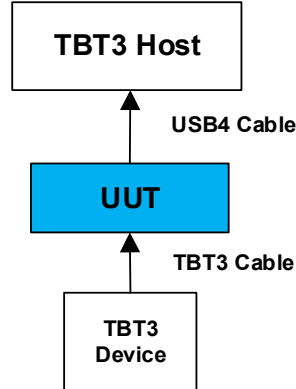


Figure 4-8: TBT3 Host ↔ UUT (USB4 Dock Under Test) ↔ TBT3 Device Topology

4.6.1.1. All Devices Tests – Interoperability Test Steps

- Run tests A.1.1 - A.1.6 as specified in Appendix A.

- Repeat this test for each port on the Hub Under Test.
- Repeat tests with all types of USB4 and TBT3 cables (see Section 1.1).

Pass:

- Tests A.1.1 - A.1.6 in Appendix A PASS

Fail:

- If any of tests A.1.1 - A.1.6 in Appendix A FAIL

4.7. USB4 Hub/Dock Functional Testing

4.7.1. USB4 Hub/Dock Multiple Cycle Testing

1. Connect the UUT with USB4 Device to USB4 host using a USB4 Cable as shown in Figure 4-1.
2. Run tests A.1.1, and A.1.3 - A.1.6 (as specified in Appendix A) 10 times i.e. each test must be performed a total of 10 times. For each cycle verify that UUT and USB4 Device enumerate.

4.7.2. BIOS Testing

Note: The tests in this section are only run if the USB4 hosts supports a pre-OS environment.

4.7.2.1. Inactive Detach/Reattach

1. Power on USB4 Host.
2. Boot to pre-OS environment (e.g. EFI shell).
3. Connect the UUT to a USB4 Host as shown in Figure 4-1.
4. Verify UUT enumeration.
5. Unplug the UUT.
6. Verify UUT removal.

4.7.2.2. Restart

1. Connect the UUT to a USB4 Host as shown in Figure 4-1.
2. Power on USB4 Host.
3. Verify UUT enumeration.
4. Restart USB4 Host.
5. Boot to pre-OS environment (e.g. EFI shell).
6. Verify UUT Enumeration.

4.7.2.3. Shutdown/Power On

1. Connect the UUT to a USB4 Host as shown in Figure 4-1.
2. Power on USB4 Host.
3. Boot to pre-OS environment (e.g. EFI shell).
4. Verify UUT enumeration.

4.7.3. Multiple UUT (USB4 Hub Under Test, UFP and DFP)

4.7.3.1. Multiple UUT (USB4 Hubs Under Test, see Figure 4-9)

Note: This test requires a USB4 Host with 2 DFP and 2 instances of the UUT (USB4 Hubs under Test).

1. Connect the first UUT to the USB4 Host.
2. Verify that the first UUT enumerates.
3. Connect a second UUT to the USB4 Host.
4. Verify that the second UUT enumerates.
5. Unplug the second UUT.
6. Verify removal of second UUT.
7. Unplug the first UUT.
8. Verify removal of the first UUT.
9. Repeat so test is performed with all of the following:
 - UUT1 plugged→UUT2 plugged→UUT1 unplugged→UUT2 unplugged
 - UUT1 plugged→UUT2 plugged→UUT2 unplugged→UUT1 unplugged
 - UUT2 plugged→UUT1 plugged→UUT1 unplugged→UUT2 unplugged
 - UUT2 plugged→UUT1 plugged→UUT2 unplugged→UUT1 unplugged

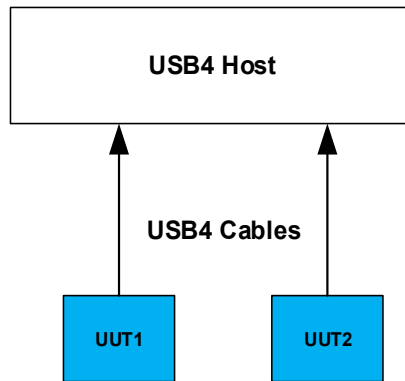


Figure 4-9: USB4 Host ↔ UUT (USB4 Hubs Under Test) Topology

4.7.3.2. Multiple USB4 Devices (UUT with 2 or more DFP, See Figure 4-10)

Note: For this test USB4 Device1 and USB4 Device2 need to be identical.

1. Connect the UUT to the USB4 Host.
2. Connect the first USB4 Device to the UUT.
3. Verify that the first USB4 Device enumerates.
4. Connect a second USB4 Device to the UUT.
5. Verify that the second USB4 Device enumerates.
6. Unplug the second USB4 Device.
7. Verify removal of second USB4 Device.
8. Unplug the first USB4 Device.
9. Verify removal of the first USB4 Device.
10. Repeat so test is performed with all of the following:
 - Device1 plugged→Device2 plugged→ Device 1 unplugged→ Device 2 unplugged

- Device 1 plugged → Device 2 plugged → Device 2 unplugged → Device 1 unplugged
- Device 2 plugged → Device 1 plugged → Device 1 unplugged → Device 2 unplugged
- Device 2 plugged → Device 1 plugged → Device 2 unplugged → Device 1 unplugged

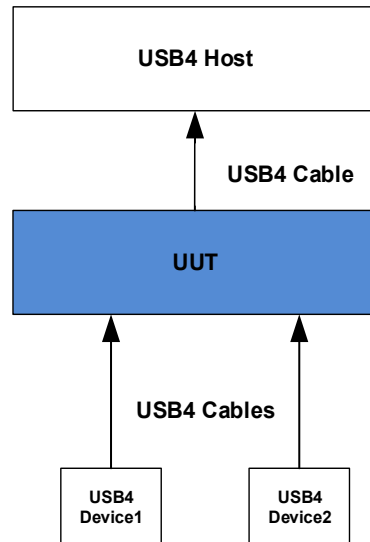


Figure 4-10: USB4 Host ↔ UUT (USB4 Hub Under Test) ↔ USB4 Devices Topology

Appendix A Interoperability Test Steps

A.1 USB4 Interop Tree (5 Hops) Topology and Concurrent Operation of all Devices in the Tree

Construct the Interop Tree as outlined in Figure A-1.

Note: A USB4 device can be up to 5 hops away from the USB4 Host along the Interop tree. If you are testing with a USB4 Host System with an embedded Hub then the IO tree must be modified accordingly as to prevent exceeding 5 Hops.

For USB4 Device Under Test (UUT): The UUT (USB4 Device Under Test) should be connected to USB4 Hub #4 (in the USB4 KGD spot as shown in Figure A-1).

Additional Test Topology for USB4 Device: For USB4 UUT with Display Out Adapter, attach multiple Displays on the 5th Hop UUT (i.e., attach multiple monitors to the USB4 Device to test maximum number of Displays supported by the UUT) and exercise the displays for 3 minutes.

For USB4 Host Under Test (UUT): USB4 Host must be replaced with UUT (USB4 Host Under Test) and a USB4 KGD should be connected to USB4 Hub #4 (in the USB4 Device Under Test spot as shown in Figure A-1).

For USB4 Externally Powered Hub Under Test (UUT): USB4 Hub#1 and USB4 Hub#4 must be replaced with UUT's (USB4 Hubs Under Test) and a USB4 KGD should be connected to UUT #4 (in the USB4 Device Under Test spot as shown in Figure A-1). If a USB4 Hub has more than 3 ports or less than 3 ports the Interop Tree needs to be modified accordingly for testing.

Additional Test Topology for USB4 Hub/Dock: Attach multiple Displays on the 5th Hop UUT (i.e., attach multiple monitors to the USB4 Hub/Dock to test maximum number of Displays supported by the UUT) and exercise the displays for 3 minutes.

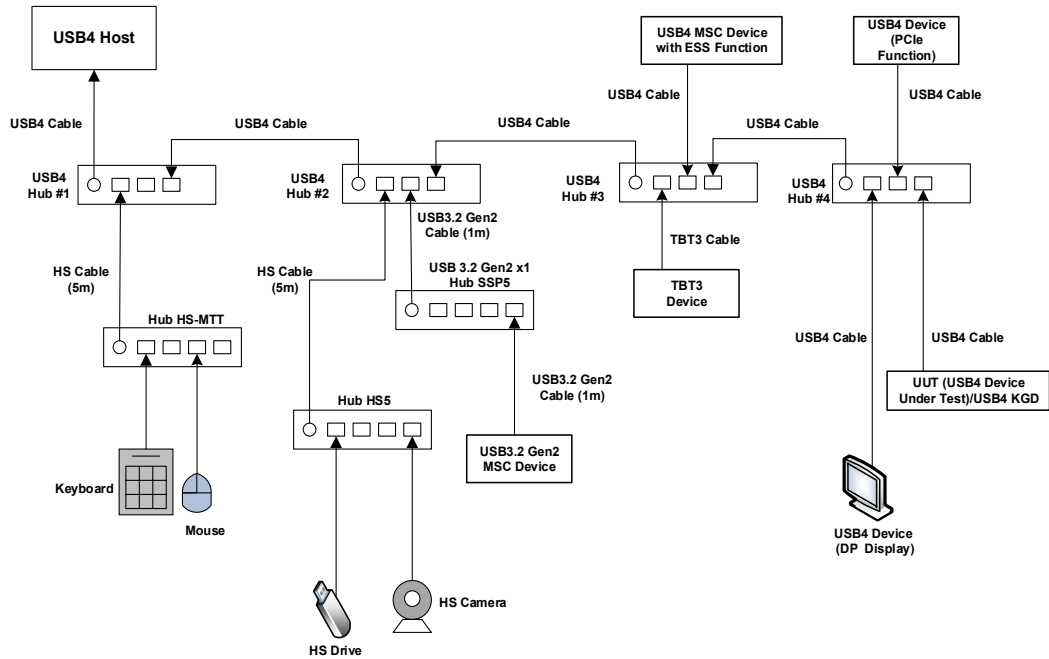


Figure A-1: USB4 Interop Tree (5 Hops) Topology

Tier	Device
1	USB4 Hub#1 – Externally-powered USB4 Hub attached to the USB4 Host
2	USB4 Hub#2 – Externally-powered USB4 Hub attached to the USB4 Hub#1
3	USB4 Hub#3 – Externally-powered USB4 Hub attached to the USB4 Hub#2
	USB4 MSC Device with ESS function attached to USB4 Hub#3
	TBT3 Device attached to USB4 Hub#3
4	USB4 Hub#4 – Externally-powered USB4 Hub attached to the USB4 Hub#3
	TBT3 Display Monitor attached to USB4 Hub#4
	USB4 PCIe Device attached to USB4 Hub#4
	UUT (USB4 Device Under Test)/KGD attached to USB4 Hub#4
3	Hub SSP5 - Externally-powered USB 3.2 Gen 2x1 Hub attached to USB4 Hub#2

	USB 3.2 Gen 2x1 MSC Device attached to Hub SSP5
3	Hub HS5 - Externally-powered USB 2.0 Hub attached to USB4 Hub#2
	HS Drive attached to Hub HS5
	HS Video Camera attached to Hub HS5
2	Hub HS-MTT - Externally-powered high-speed Hub with multiple transaction translators Attached to USB4 Hub#1
	Keyboard attached to Hub HS-MTT
	Mouse attached to Hub HS-MTT

A.2 Interoperability Tree Concurrent Operation

Whenever the **Interoperability Test Steps** state to operate all of the devices in the Interop Tree, the following is done concurrently:

- Operate the microphone in the Video Camera by speaking into the microphone and view the input sound monitor.
- View streaming video from the HS Video Camera.
- Transfer a 30+ MB file from the USB4 MSC Device to the HS Drive.
- Transfer a 1+ GB file from the USB 3.2 Gen2 MSC to USB4 MSC Device
- Watch video and listen to audio from USB4 DP Monitor.
- Operate the TBT3 Storage Device by transferring 1+ GB file to and from the device
- Operate the USB4 PCIe Device.
- Operate the USB4 Device Under Test (UUT)/KGD.

For Example: If the UUT (USB4 Device Under Test) is a Mass Storage Device, then transfer files across various drives in the tree (HS, USB 3.2 Gen2 MSC Device, UUT, and other storage devices such as Thunderbolt 3, PCIe etcetera). The goal is to ensure Read/Write operation is performed on the UUT in conjunction with operating all other devices on the tree.

- If the UUT (USB4 Device Under Test) is a device other than Mass Storage Device, then ensure the operation on the UUT (USB4 Device Under Test) overlaps over the period of time that other devices in the tree are operating.
- Strike keys on keyboard.
- Move the mouse.
- Verify Device Speed and that all devices on the Interop Tree are operating concurrently.

Note: Verify charging capability along with concurrent operation if supported. For example: If a host (with a battery (power adapter disconnected) is connected to a peripheral capable of charging, then verify the host system is charging along with concurrent operation in Interop.

A.3 All Devices Tests – Interoperability Test Steps

(Note: In Interop Testing for Device Enumeration and Removal verification see Appendix C)

A.1.1 Inactive Detach & Reattach

1. Stop all Interoperability Tree device operation. Close any software that is used for any Interoperability Tree device operation.

Note: All combinations of Detach/Reattach must be tested including Flip/Reattach. For example, for a Device with Upstream Facing Port (UFP) Receptacle: Test Device Detach/Reattach at the UFP and also repeat the test at the Host Downstream Facing Port (DFP) to which the device is connected.

2. Detach the entire Interoperability Tree.
3. Reattach the entire Interoperability Tree to the same port that it was detached from.
4. For Hub under Test, Detach and Reattach Devices connected to the downstream port as an additional test. This test is in addition to the upstream port inactive detach/reattach combinations.
5. Operate all the devices in the Interoperability Tree. Verify Device Speed and that all devices on the Interop Tree are operating concurrently.

Pass:

- All Interoperability Tree devices operate correctly

Fail:

- One or more Interoperability Tree devices fail to operate correctly

A.1.2 Active Detach & Reattach

1. Operate all the devices in the Interop Tree

Note: All combinations of Detach/Reattach must be tested. For example, for a Device with Upstream Facing Port (UFP) Receptacle: Test Device Detach/Reattach at the UFP and also repeat the test at the Host Downstream Facing Port (DFP) to which the device is connected.

2. While operating the devices, detach the entire Interoperability Tree.

3. Reattach the entire Interoperability Tree to the same port that it was detached from.
4. For Hub under Test, Detach and Reattach Devices connected to the downstream port as an additional test. This test is in addition to the upstream port active detach/reattach combinations.
6. Operate all the devices in the Interoperability Tree. Verify Device Speed and that all devices on the Interop Tree are operating concurrently.

Pass:

- All Interoperability Tree devices operate correctly

Fail:

- One or more Interoperability Tree devices fail to operate correctly or System Locks Up/Freezes

A.1.3 Sleep/Wake

1. Operate all the devices in the Interoperability Tree.
2. While operating the devices, put the system into sleep.
3. Wait 90 seconds then wake the system with the mouse on the Interoperability Tree.
4. Upon resuming verify file transfers resume without error and that no application crashes.

Note: If necessary, it is acceptable to close and reopen the audio/video application after resuming.

5. Operate all devices in the Interoperability Tree. Verify Device Speed and that all devices on the Interop Tree are operating concurrently.

Note: If a USB4 Device (Unit Under Test) supports Function Wake then verify Wake from the USB4 Device i.e., Sleep/Wake. Repeat the wake test with all interfaces on the USB4 Device (Unit Under Test) that support wake. For example: Wake event should be from PCIe/USB device, such as Wake-on-LAN, Wake from USB.

Pass:

- System sleeps
AND
- System resumes
AND
- Active operation continues without error

Fail:

- System does not sleep
OR
- System does not resume or wake
OR
- System locks up or freezes
OR
- Any device is not functional or does not continue operation
OR
- Any application freeze or crash

A.1.4 Hibernate/Resume

1. Operate all the devices in the Interoperability Tree.
2. While operating the devices, put the system into hibernation. Wait for 90 seconds and then resume the system.
3. Upon resuming verify file transfers resume without error and that no application crashes.

Note: If necessary, it is acceptable to close and reopen the audio/video application after resuming.

4. Operate all devices in the Interoperability Tree. Verify Device Speed and that all devices on the Interop Tree are operating concurrently.

Note: If a USB4 Device (Unit Under Test) supports Wake then verify Wake from the USB4 Device i.e., Hibernate/Wake. Repeat the wake test with all interfaces on the USB4 Device (Unit Under Test) that support wake. Examples of Wake Events: Wake from PCIe/USB device, such as Wake-on-LAN, Wake from USB.

Pass:

- System hibernates
AND
- System resumes
AND
- Active operation initiated in previous step continues without error

Fail:

- System does not hibernate
OR
- System does not resume or wake
OR
- System locks up or freezes
OR
- Any device is not functional or does not continue operation
OR

- Any application freeze or crash

A.1.5 Restart

1. If there are file copying processes, let them finish and then close all of them.
2. Restart system.
3. After system reboots operate all the devices in the Interoperability Tree. Verify Device Speed and that all devices on the Interop Tree are operating concurrently.

Pass:

- All Interoperability Tree devices operate correctly

Fail:

- One or more Interoperability Tree devices fail to operate correctly

A.1.6 Shutdown/Power On

1. If there are file copying processes, let them finish and then close all of them.
2. Shutdown the system and turn off the External Power Supply for the USB4 Host.
3. Turn PC and External Power Supply for the USB4 Host back on.
4. After system boots operate all the devices in the Interoperability Tree.
5. Verify Device Speed and that all devices on the Interop Tree are operating concurrently.

Pass:

- All Interoperability Tree devices operate correctly

Fail:

- One or more Interoperability Tree devices fail to operate correctly

Appendix B Driver Verifier for Operating Systems

Interoperability testing must be tested with driver verifier enabled in order to help catch problems that may arise during testing.

B.1 List of Drivers for Windows 11

Note: This section is a work in progress and is subject to change.

Flag Setting: Verifier /flags 0x2099B/driver

bthusb.sys

hidclass.sys

hidparse.sys

hidusb.sys

kbdclass.sys

kbdhid.sys

mouclass.sys

mouhid.sys

uaspstor.sys

ucx01000.sys

Usb4HostRouter.sys

Usb4DeviceRouter.sys

usbaudio.sys

usbccgp.sys

usbd.sys

usbehci.sys

usbhub.sys

usbhub3.sys

usbohci.sys

usbport.sys

usbprint.sys

usbscan.sys

usbstor.sys

usbuhci.sys

usbvideo.sys

usbxhci.sys

winusb.sys

wmbclass.sys

Add DisplayPort Driver's (dxgkrnl.sys, IHV Display Drivers)

Add PCIe Function Drivers

Any class or device-specific drivers used by a Device Under Test

In general, add drivers for devices in the Interop Tree.

An Example List:

Verifier /flags 0x2099B /driver

aqnic650.sys

stomvme.sys

EhStorClass.sys

igdkmd64.sys

dxgkrnl.sys

IndirectKmd.sys

WUDFRd.sys

DisplayLinkUsbIo_x64_8.1.848.0.sys

dlcdcnm62_x64.sys

dlcdcnm6.sys

dlusbaudio.sys

dlusbaudio_x64.sys

bthusb.sys

hidclass.sys

hidparse.sys

hidusb.sys

kbdclass.sys

kbdhid.sys

monitor.sys

mouclass.sys

mouhid.sys

uaspstor.sys

ucx01000.sys

usbaudio2.sys

usbaudio.sys

usbccgp.sys

usbd.sys

usbehci.sys

Usb4HostRouter.sys

Usb4DeviceRouter.sys

usbhub.sys

usbhub3.sys

usbohci.sys
usbport.sys
usbprint.sys
usbscan.sys
usbstor.sys
usbuhci.sys
usbvideo.sys
usbxhci.sys
winusb.sys
wmbclass.sys

B.2 List of Drivers for macOS

TBD

B.3 List of Drivers for Android OS

TBD

B.4 List of Drivers for Chrome OS

TBD

Appendix C Device Enumeration/Removal Verification

Display:

Display Enumeration Verification:

Verify display turns on with no noticeable visual artifacts.

Verify maximum resolution and refresh rate offered on external display can be selected in the OS.

Enable audio output to the display.

Watch video and listen to audio.

Display Detach

Verify external display is no longer present in the OS.

PCIe Card/Device Enumeration Verification:

Vendors must provide a utility to verify:

Enumeration

Link Width

Link Speed

PCIe Card/Device Removal

Verify PCIe Card is no longer present

USB4 Device Enumeration Verification:

Vendors must provide a utility to verify:

Enumeration

Vendor ID:

Product ID:

Link Width

Link Speed

Link Status

USB4 Device Removal

Verify USB4 Device is no longer present

TBT3 Device Enumeration Verification:

Vendors must provide a utility to verify:

Enumeration

Vendor Name

Device Name

Vendor ID

Device ID

Current Link Width

Link Speed

Link Status

TBT3 Device Removal

Verify TBT3 Device is no longer present

