TYROLER®
BRIGHT TOOLS

www.tyroler.co.il

Thank you

for your purchase of The Glider

Please notice – The Glider has 3 different models.
You can check the recommended size range below.
In order to get the best results, it is important to take a careful look at the different models.
If the Glider doesn't work well on your windows, it is probably not the right model for you.
In that case, contact us, and we will **adjust and replace** to the right model according to the thickness of your window.

The Glider Window Cleaner



The Glider S-1
Effective for single glazed windows between
0.08"-0.3" / 2-8 mm



The Glider D-2
Effective for double glazed windows between
0.3-0.7" / 8-18 mm



The Glider D-3
Effective for double glazed windows between
0.8"-1.1" /20-28 mm

Further questions and information can be referred to our product manager:

support@tyroler.co.il
WhatsApp: **+972547872242**

TYROLER®
BRIGHT TOOLS

www.tyroler.co.il


The Glider

DOUBLE SIDED, MAGNETIC WINDOW CLEANER


For big and hard to reach windows, it cleans the exterior of windows, while staying in the room.



1. Apply cleaning solution generously on both sides of the window.

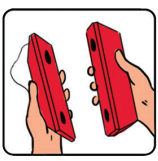


2. Separate the two sides of the Glider.

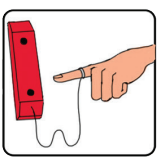


3. Place the plastic ring, (at the end of the safety string) on one of your fingers.




4. Place the two parts of the Glider on either side of the window, (small piece on the outside).

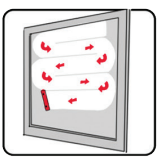

5. Guide the Glider across the glass in an "S" shape to remove the water. Remaining drops and streaks of water will be removed on next step.

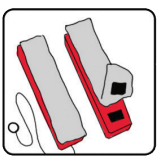

6. Place the microfiber cloth on both parts of the Glider.

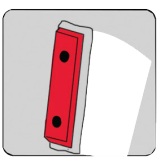

7. Dry and shine your window. In case that the water streaks dried off, you may apply cleaning solution, or clear water on the microfiber cloth.

Safety instructions

Watch your fingers, the Glider contains strong magnets.
Hold safety rope while cleaning.
Keep away from: children, pace makers and electronic equipment.

Comments:

For very dirty windows attach the wet cloth to the Glider and scrub the window thoroughly, before proceeding to step # 4

To prevent detachment during cleaning, turn slowly around corners to avoid hitting the frame. Always pay attention to the piece on the outside.
Make sure the rubber blades are always wet. Maintain light pressure as you move the Glider across the window. Use only Glider micro fiber cloth. (It has low friction on the window).

If you need any assistant please do not hesitate and let us know, we promise to help:
Support@tyroler.co.il

See a short video at our website, which demonstrates the operation Of the Glider.

SCAN ME