


Assembly

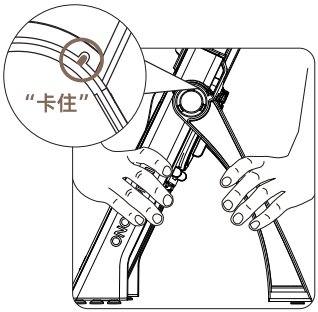


1. Fully unfold the slicer and place it on a flat, stable surface.

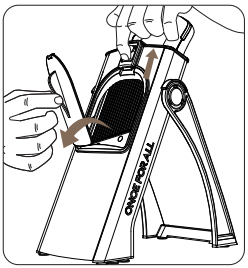


2. Pressing upward on the tab to lift the Chute Release.

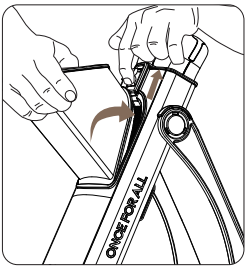


3. Pressing upward on the tab to lift the Chute Release again.

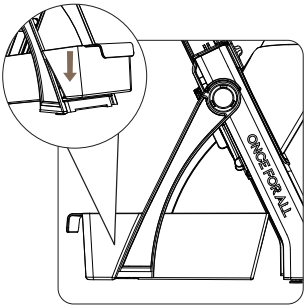

4. Put the Container

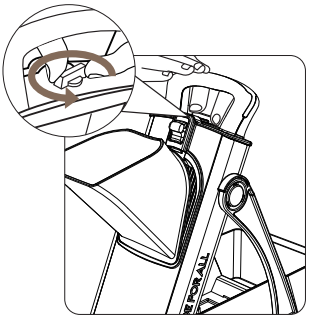

5. Unlock by turning the handle counterclockwise before use.

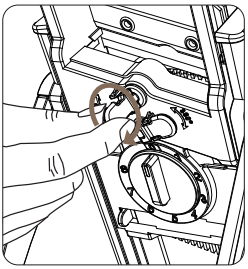

6. Turn the knob to select the function mode.

Clean








One-click Disassembly

WARNING: NEVER insert your fingers in or near the Blade to dislodge food.


Guide to Cuts & Slices

Mode 1: Slice

1.No need to adjust Knob A & B.
2.Only turn the dial C
0.1–8 mm (higher numbers = thicker slices).

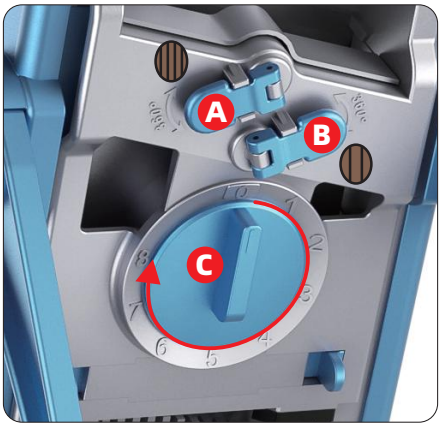




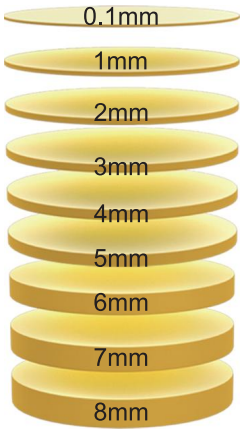

Mode 2: Strip

1.Unsnap Knob B and rotate it a full 360°.
2.Snap the Knobs back into place after rotated.
3.Adjust Dial C to any number from 4 to 8.

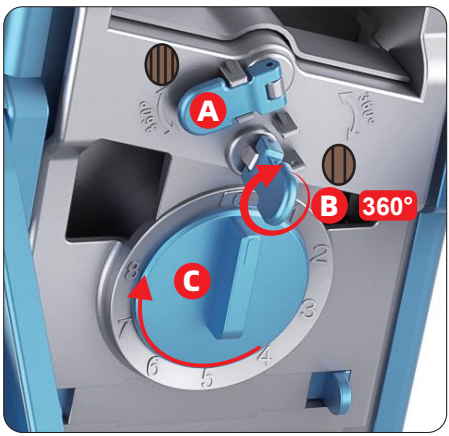





4-6mm




7-8mm

Guide to Cuts & Slices

Mode 3: Julienne

1.Unsnap both Knob A & B and rotate them a full 360°.
2.Snap the Knob back into place after rotated.
3.Adjust Dial C to any number from 1 to 3.

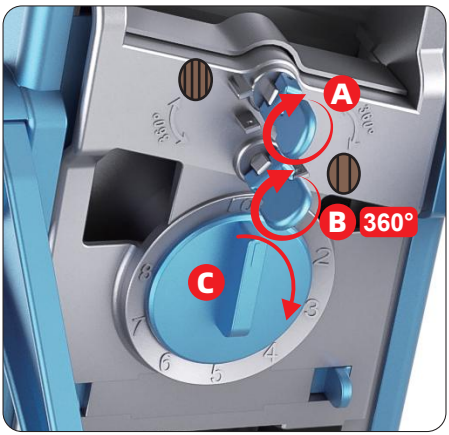





0-2mm




2-3mm

Mode 4: Dice First thin slice, then chop.

Step 1:
First Cutting Stage (Slicing)



Step 2: 1.Reload the initially sliced pieces back into the food chute.
2.Unsnap both Knob B and rotate them a full 360°.
3.Snap the Knob back into place after rotated.

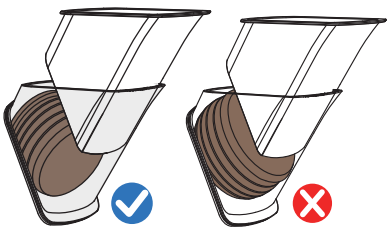

One set of blades lifts (see figure).



