Lunix®

Designed for elevated living

LX3 Hand Massager

Lunix Lifetime Warranty

Register within 30 days of purchase to activate your **LUNIX Lifetime Warranty**. For full terms and details, visit: **lunixinc.com/pages/lifetime-warranty**

US-Based Customer Support:

(307) 461-9622 **support@lunixinc.com**

LUNIX reserves the right to make changes and improvements to products without incurring any obligation to incorporate such improvements into products previously sold.

Table of Contents

Welcome 3

Terms of Use 4

Benefits 4

What's In The Box? 5

Product Specifications 5

Important Safety Information 6-7

Product Overview 8

Control Panel and Settings Guide 9-11

Safety Pressure Release Valve 11

Charging the Hand Massager 11

How to Use the Hand Massager 12

How to Use the Hand Warmer 13

How to Use the Finger Massager 13

Care, Storage, and Cleaning 14

Troubleshooting 14-16

FCC Compliance 17

Warranty and Support 17-18

Lunix®
Designed for elevated living

Welcome

Thank you for choosing the Lunix LX3 Hand Massager!

The LX3 is designed to bring restorative comfort into your daily self-care routine through air compression, optional vibration, and soothing heat. Its cordless design, open-ended chamber, and adjustable settings allow you to personalize each session for your comfort.

Lunix is a wellness and recovery brand focused on original design, continuous innovation, reliable products, and dedicated customer care. We are here to support your well-being journey with products designed for elevated living.

This product is designed for personal care and relaxation. It is not a medical device and is not intended to diagnose, treat, cure, or prevent any health condition.

You can find more information on our website at
www.lunixinc.com

If you have any questions about your model or its operation,
contact LUNIX Customer Support by email :
support@lunixinc.com

Terms of Use

Please read this manual carefully before using the LX3 Hand Massager. By using this product, you agree to follow all safety instructions, warnings, and usage guidelines provided by LUNIX.

This product should only be used as intended and in accordance with this manual. Improper use, misuse, unsafe handling, or failure to follow the instructions may result in injury, product damage, or property damage.

The user is responsible for using the LX3 Hand Massager and its accessories safely and appropriately. LUNIX is not responsible for injuries, damages, or losses resulting from misuse, improper handling, unauthorized modifications, failure to follow instructions, or use of the product in a manner not recommended in this manual.

To the fullest extent permitted by applicable law, LUNIX shall not be liable for any indirect, incidental, special, or consequential damages arising from the use or misuse of this product.

If you do not agree to these terms, please do not use the product. For return or exchange eligibility, the product must meet LUNIX return policy requirements and be in acceptable return condition.

Benefits

The LX3 Hand Massager combines air compression, heat, vibration, and adjustable intensity to bring comfort and relaxation into your daily routine.

Comfort for Tired Hands: Air compression helps relax hands after typing, crafting, gripping, or long hours of everyday use.

Personalized Massage: Choose from multiple programs, 6 intensity levels, and 2 vibration modes to create a session that feels right for you.

Heat Comfort: The heat function adds controlled, gentle warmth to your session for added comfort.

Vibration Support: Pulse and Continuous vibration modes allow you to customize the feel of your massage.

Simple Daily Self-Care: The clear control panel and automatic shut-off make each session easy to start, adjust, and enjoy.

What's in the Box?



1x **LX3** Massager



1x Travel Bag



1x User Manual



1x Finger Massager



1x USB Plug



1x USB Cable



1x Hand Warmer

MODEL: LX3
PRODUCT NAME: Hand Massager
POWER SOURCE: Rechargeable battery with USB wall adapter
BATTERY: Lithium battery
ADAPTER INPUT: 100-240V AC, 50/60Hz, 0.4A
ADAPTER OUTPUT: 5V DC, 1.0A
CHARGING TYPE: USB-C charging
PROGRAMS: 6 automatic compression programs
INTENSITY LEVELS: 6 levels
TIMER: 15-minute auto shut-off
FUNCTIONS: Heat: On/Off ; Vibration: Pulse and Continuous
DEFAULT SETTINGS: Mode 1; Intensity Level 3; Heat Off; Vibration Off; 15-minute session
WEIGHT: 2.5 lb / 1.1 kg
DIMENSIONS: 11.8 x 6.3 x 4.7 in / 30 x 16 x 12 cm

Important Safety Information

The LUNIX LX3 Hand Massager is designed for safe, comfortable, and relaxing personal use when operated as instructed. Please read all safety information before using the device.

General Use

• Use this product only for its intended purpose.
• This product is not intended to diagnose or treat any health condition.
• Consult your physician before use if you are pregnant, diabetic, use a pacemaker or other medical implant, have heart or vascular concerns, have irregular blood pressure, have osteoporosis, have cancer, have recently had surgery, have blood clots, have reduced sensation in your hands, or have any other health concerns.
• Do not use the device on broken, swollen, inflamed, numb, or unusually sensitive skin.
• Do not use the device if you are sleepy or may fall asleep during use.
• Do not use the device while under the influence of alcohol, sedatives, pain medication, or anything that may reduce your awareness of heat or pressure.
• Remove rings, watches, bracelets, and other jewelry before each session.
• Start with the lowest intensity and increase gradually only if comfortable.
• Stop using the device immediately if you feel pain, discomfort, excessive heat, numbness, dizziness, or anything unusual.
• Keep the device away from children and pets.
• This product is not a toy. Never allow children under the age of 14 to use the massager without the supervision of a responsible, knowledgeable adult.

Charging and Fire Safety

WARNING — Fire Hazard

The hand massager contains a rechargeable lithium battery. Improper charging, use, or storage may cause overheating, fire, or injury. Always follow the charging instructions carefully.

• Use the included USB-C charging cable and 5V/1A power adapter for optimal charging performance.
• A 5V/2A adapter may also be used, but charging performance may vary.
• Do not use a charger above 5V. Using an incompatible adapter may damage the device, cause overheating, or create a fire risk.

• Do not use, charge, or store the product if the device, charging cable, or adapter is damaged, wet, leaking, swollen, smoking, producing an unusual odor, or becoming excessively hot.
• Do not cover the device while charging or during use.
• Do not charge the device overnight or leave it connected for an extended period after it is fully charged.
• Unplug the device once it is fully charged and before cleaning.
• Keep the device away from water, open flames, high heat, and direct sunlight.
• Do not disassemble, puncture, crush, burn, or short-circuit the product or battery.
• Do not use the product with wet hands or in humid environments.
• In case of overheating, smoke, unusual odor, or fire, stop using the device immediately, unplug it if it is safe to do so, move away from the product, and follow local emergency procedures.

Session Time

• Start with a 15-minute session.
• Do not exceed 60 minutes of continuous use.
• Allow the device to cool down between extended sessions.
• Light marks or dimples may appear on the skin after use. This can be normal and should fade shortly. Stop use if marks do not fade, become painful, or cause concern.

Product Overview

Top View

Control Pad



Side View

Open-Ended Finger Chamber



Hand Chamber

Bottom View

USB-C Charging Port



Safety Pressure Release Valve



USB-C Cable & Power Adapter


⚠ Safety Pressure Release Valve:

Instantly releases air from the massager in case of discomfort or emergency. Located on the bottom of the device.

Important: *Make sure the Safety Pressure Release Valve is fully closed before starting your massage. If left open, air may leak and the compression massage may not work properly.*

Control Panel

Use this quick guide to understand each button and indicator before starting your massage.

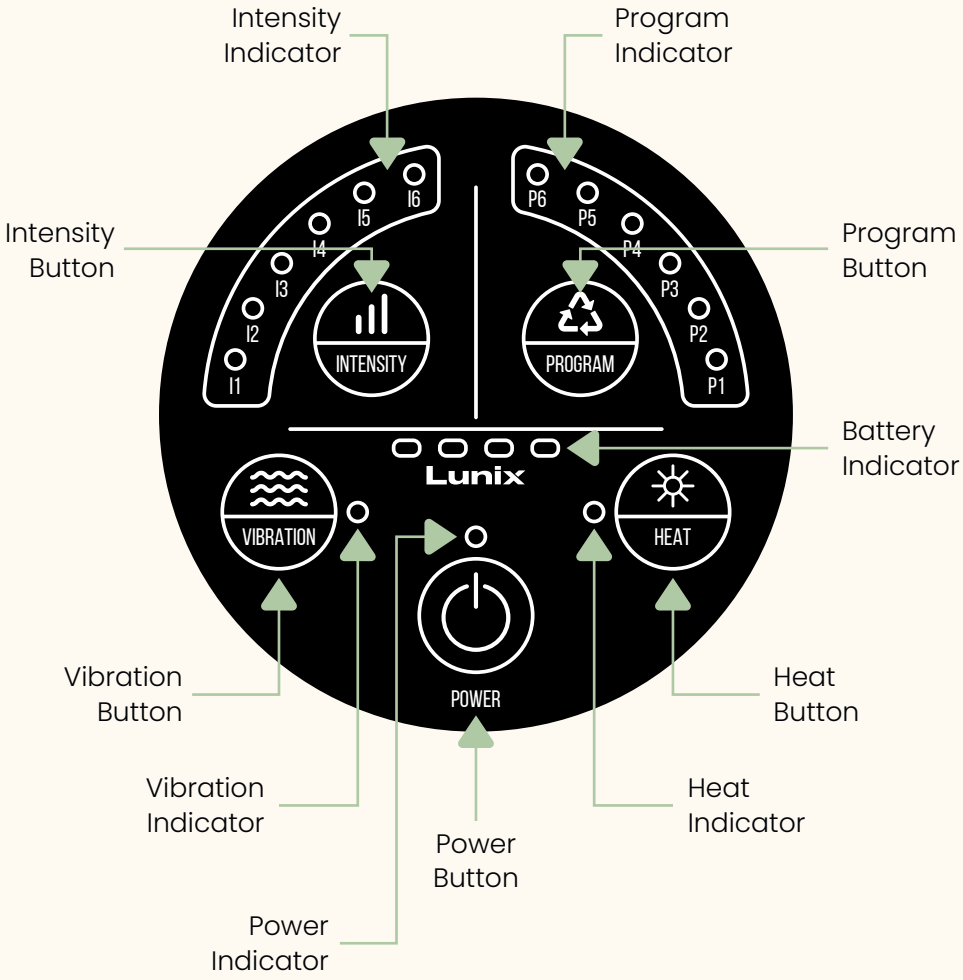

DESIGNED IN THE USA

Use this guide to understand the buttons and what each one does before starting your massage.

Power Button: Press and hold for 2 seconds to turn on or off. When the device is turned on, the red light above the button will turn on.

Program Button: Press the program button to start the massage. By default, it starts with Program 1.

Switch between 6 programs:

Program	Area	Description
P1	Fingers, Palm & Wrist Massage	Combination massage pattern designed for general hand relaxation.
P2	Fingers, Palm & Wrist Massage	Second combination pattern with a different pressure sequence.
P3	Palm & Wrist Massage	Cycle 1: Palm massage > Cycle 2: Palm and wrist massage
P4	Wrist Massage	Focuses on the wrist area.
P5	Palm & Wrist Massage	Cycle 1: Palm massage > Cycle 2: Wrist massage
P6	Palm Massage	Focuses on the palm area.

Adjust your hand position and intensity until the session feels comfortable.

Intensity Button: Adjust air compression intensity from Level 1 (lowest) to Level 6 (highest). The default setting is Level 3. If you have sensitive hands or are using the product for the first time, start at Level 1. Increase gradually as your hands adjust to the pressure.

Heat Button: The heat function is off by default. Press the Heat Button to turn the heat on or off. When heat is activated, the indicator light next to the Heat Button turns on.

The LX3 is designed to provide controlled, gentle warmth for comfort rather than intense heat. Heat sensation may vary depending on room temperature, hand position, skin sensitivity, and personal heat preference.

The heat builds gradually and may take 5–10 minutes to become noticeable. It may reach approximately 109°F / 43°C under normal operating conditions. If the device feels too warm or uncomfortable, turn off the heat function and stop using the device.

Vibration Button: Switch between 2 vibration modes: Pulse and Continuous. When vibration is activated, the indicator light next to the Vibration Button turns on.

Battery Indicator: The lights blink while charging. When fully charged, the display will show solid green lights.

Safety Pressure Release Valve

The Safety Pressure Release Valve is located at the bottom of the device.

Use it if the compression feels uncomfortable or if you need to quickly release the air pressure.

Important: Make sure the Safety Pressure Release Valve is fully closed before starting a massage. If it is left open, air may leak, and the compression massage may not work properly.



Safety Pressure Release Valve

Charging the Hand Massager

Fully charge the hand massager before first use. For maximum battery capacity and optimal performance, the first full charge may take up to 7 hours.

Connect the included USB-C cable to the charging port, then plug it into the included 5V/1A power adapter and a power outlet. A 5V/2A adapter may also be used, but charging performance may vary.

The battery indicator will blink while charging. When fully charged, the battery indicator will stop blinking and show solid green lights. Unplug the device before use.
Important: The hand massager cannot be used while charging. Do not turn on or use the device while it is connected to the charger.

How to use the Hand Massager

1. Check the device and accessories for damage before use.
2. Make sure the Safety Pressure Release Valve on the bottom of the device is fully closed.
3. Remove rings, watches, bracelets, and other jewelry. Wash and dry your hands.
4. Place the device on a flat, stable surface.
5. Insert one hand fully into the cloth-lined chamber with your palm facing down.
6. Make sure your hand is flat and comfortably positioned inside the chamber.
7. Press and hold the Power Button for 2 seconds to turn the device on.
8. Press the Program Button to start the massage.
9. Select your preferred program and adjust the intensity level, heat, and vibration as desired.
10. Relax your hand during the session.

During and After Use

For first use, start at Intensity Level 1 and increase gradually as your hand adjusts to the massage.

The device will automatically shut off after 15 minutes. To turn it off manually, press and hold the Power Button for 2 seconds.

After the session, wait for the airbags to deflate before removing your hand. If you feel uncomfortable at any time, turn off the device or use the Safety Pressure Release Valve.

How to use the Hand Warmer



The hand warmer is used separately from the hand massager.




1. Charge the hand warmer before use. A blue light will flash while charging.
2. Press and hold the Power Button for 3 seconds to turn on the heating function. The hand warmer starts on high heat.
3. Press the Power Button once to change heat levels: High > Medium > Low.



Hand Warmer Safety: Inspect the hand warmer and charging cable before use. Do not use the hand warmer while charging. Do not use it if it becomes too hot, produces an unusual odor, appears damaged, or feels uncomfortable against the skin. Stop use and allow it to cool if needed.

How to use the Finger Massager

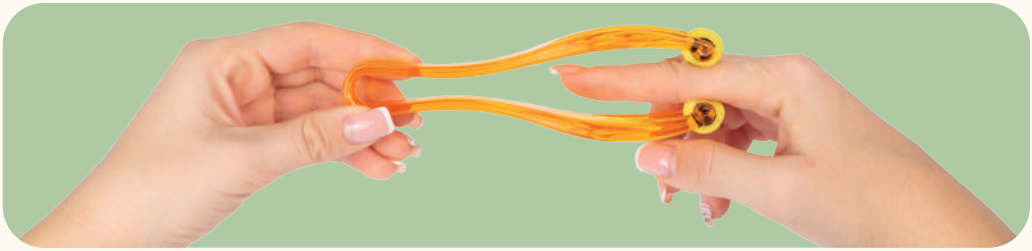

The finger massager is included for simple, manual finger relaxation.

1. Place one finger in the center of the roller.
2. Gently roll back and forth.
3. Adjust pressure as needed for comfort.
4. Stop if you feel pain or discomfort.

Care, Storage & Cleaning Instructions

- Turn off and unplug the device before cleaning.
- Allow the device to cool down before cleaning or storing.
- Wipe the exterior with a soft, slightly damp cloth. Use only mild, non-abrasive cleaning products when needed.
- Allow the interior fabric lining to air out briefly before storing.
- Do not wash, soak, or submerge the device in water.
- Do not use harsh detergents, chemicals, solvents, alcohol, or abrasive cleaners.
- Inspect the device, charging cable, adapter, and charging port regularly for signs of wear or damage. Do not use the device if any part appears damaged.
- Do not bend, twist, or wrap the charging cable tightly around the device during storage.
- Do not place heavy objects on top of the device.
- Store the device powered off in a cool, dry place. Keep away from humidity, heat, direct sunlight, water, flammable materials, children, and pets.
- If storing for an extended period, charge the battery to about 50% and recharge every 3–6 months to help maintain battery health.
- Do not attempt to open or repair the device yourself. Contact Lunix Support for assistance.

Troubleshooting

If you experience an issue, use the guide below. If the issue continues, contact Lunix Support at support@lunixinc.com.

PROBLEM	POSSIBLE CAUSE	SOLUTION
The device does not turn on.	The battery is low, or the Power Button was not held long enough.	Press and hold the Power Button for 2 seconds. If the device still does not turn on, recharge it fully.
The massage pressure is too strong.	The intensity level is too high, or your hand is not positioned comfortably.	Lower the intensity to Level 1 and adjust your hand position.

PROBLEM	POSSIBLE CAUSE	SOLUTION
The massage pressure is too low.	The battery is low, the intensity level is too low, or the Safety Pressure Release Valve is leaking air.	Recharge the device, increase the intensity level gradually, or make sure the Safety Pressure Release Valve is fully closed.
The device suddenly stopped working.	The 15-minute session ended, the battery is low, or the device has entered overheating protection after extended use.	Recharge the device if needed. If the session ended, restart the device. If the device feels warm, turn it off and let it cool before using it again.
I hear a faint sound while using the massager.	The air pump is working.	This is normal.
I have light marks or dimples on my hand after the massage.	Temporary pressure marks from the airbags.	This can be normal and should fade shortly. Stop use if the marks do not fade, become painful, or cause concern.
The airbags are not inflating.	The battery is low, the Safety Pressure Release Valve is open, or there may be an internal issue.	Recharge the device and make sure the Safety Pressure Release Valve is fully closed. If the issue continues, contact Lunix Support.
The device is not charging.	The cable is not fully connected, the adapter is not correct, or the charging port may be obstructed.	Make sure the USB-C cable is fully inserted. Use the included USB-C cable and 5V/1A adapter for optimal charging performance. A 5V/2A adapter may also be used. Do not use an adapter above 5V.
The green charging light is not flashing.	The device may already be fully charged, the cable connection may be loose, or the adapter may not be correct.	Check the cable connection and use the included 5V/1A adapter. A 5V/2A adapter may also be used. Do not use an adapter above 5V. If the device still does not charge, contact Lunix Support.

PROBLEM	POSSIBLE CAUSE	SOLUTION
The device turns on for a few seconds, then all lights flash and the device powers down.	The device is not charging properly because the connection is not made properly between the USB-C port and USB-C cable, or the adapter is not correct.	Make sure the USB-C cable is fully inserted into the charging port and use only the included cable and a 5V/1A adapter. A 5V/2A adapter may also be used. Do not use an adapter above 5V. If the issue continues, contact Lunix Support.
The display turns on and off or makes a beeping noise.	Internal electronic issue or incorrect voltage.	Stop using the device and contact Lunix Support.
The device changes intensity programs by itself.	Internal electronic issue or PCB defect.	Stop using the device and contact Lunix Support at support@lunixinc.com for further assistance.
The heat function does not turn on or does not feel warm.	The heat function may not be activated, the battery may be low, or the warmth may not have had enough time to build gradually.	Press the Heat Button to activate the heat function. Make sure the battery is sufficiently charged. Allow 5–10 minutes for the controlled warmth to build. If the device feels too warm or uncomfortable, turn off the heat function and stop using the device.
The device feels too hot.	Extended use or the heat function has been active for too long.	Turn off the device and allow it to cool before using it again. Do not continue use if it feels uncomfortable.
The wrist area does not seem to massage.	The selected program may not focus on the wrist area, or there may be an internal issue.	Try a wrist-focused program. If the wrist massage still does not work, contact Lunix Support.

Still Need Help?

Contact Lunix Support at **support@lunixinc.com**. Include your order number and a brief description of the issue.

FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

This product has been tested and found to comply with the limits for a Class B digital device under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential setting.

This product generates, uses, and can radiate radio frequency energy.
If not used according to the instructions, it may cause harmful interference to radio communications.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Warranty and Support

Register your product within 30 days of purchase to activate your Lunix Lifetime Warranty. For full terms and details, visit lunixinc.com/pages/lifetime-warranty. Please read and follow the instructions in this manual to ensure your warranty remains valid.

Covered by Warranty
For registered products, coverage is subject to the Lunix Lifetime Warranty terms.

For products not registered within 30 days, standard warranty coverage includes qualifying defects in components within the following warranty periods:

- 1-year warranty for the air compression system, electronic control board (PCB), and valves
- 6-month warranty for the battery and charging cable

Coverage does not include damage caused by user actions, including but not limited to improper use, incorrect maintenance, abuse, water exposure, improper cleaning, or use outside the instructions in this manual.

Not Covered by Warranty

The following are not covered: lack of maintenance; improper use or abuse; water damage; improper cleaning; unauthorized modifications or repairs; normal wear and tear; failure to follow the instructions in this manual; and any parts, accessories, or issues not specifically listed as covered, unless otherwise stated in the applicable Lunix Lifetime Warranty terms.

Additional Terms

This warranty is valid only for products purchased directly from Lunix or an authorized Lunix seller. Purchases from unauthorized third-party sellers are not covered. Lunix does not operate a new-for-old warranty once the product has been used, except as described in the applicable warranty terms.
For the most updated manual, warranty information, replacement parts, or support, visit www.lunixinc.com.

US-Based Customer Support
Phone: (307) 461-9622
Email: support@lunixinc.com
Address: LUNIX USA LLC, 30 N Gould St, Ste R, Sheridan, WY 82801

If you have questions, need help with your product, or would like to order replacement parts, contact Lunix Support. Our team will respond as quickly as possible and help you get the most from your restorative daily routine.

Lunix®

Designed for elevated living

The LUNIX Promise

LUNIX is a leading wellness & recovery brand that actively reshapes the category with premium restorative and relaxation solutions for elevated living.

Health-conscious customers trust us for our original designs, first-to-market innovation & dedicated customer care.

Through continuous innovation, dynamic relaxation & structural restoration, we design well-being products that support self-care, targeted relief, alignment, stability, an at-home recovery.

Get in Touch:

WEBSITE
www.lunixinc.com

EMAIL
support@lunixinc.com

PHONE
(307) 461-9622

ADDRESS
LUNIX USA LLC - 30 N Gould St, Ste R, Sheridan, WY 82801