Hi-Spec

OWNER'S MANUAL




3.6V USB POWER SCREWDRIVER

Specification

Rated Voltage	DC 4.0Vmax (3.6V standard)
No-load Speed	200rpm
Torque Max.	4.0Nm
Capacity	1300mAh
Charge Time	1~3Hrs
Screw Capacity	6.35mm(1/4″)
LED Light	Yes
USB Charger (not included)	Input：100~240V 50/60HZ
	Output：2.1A 5V (max.)
DECLARATION OF SOUND LEVEL ACCORDING TO EN 60745	
Sound pressure LPA	70dB(A)
Sound power LWA	81dB(A)
Uncertainty K:	3 dB(A)
DECLARATION OF VIBRATION LEVEL ACCORDING TO EN 60745	
Screw mode:	Ah=0.39m/s^2
Uncertainty K:	1.5m/s^2

Product Features

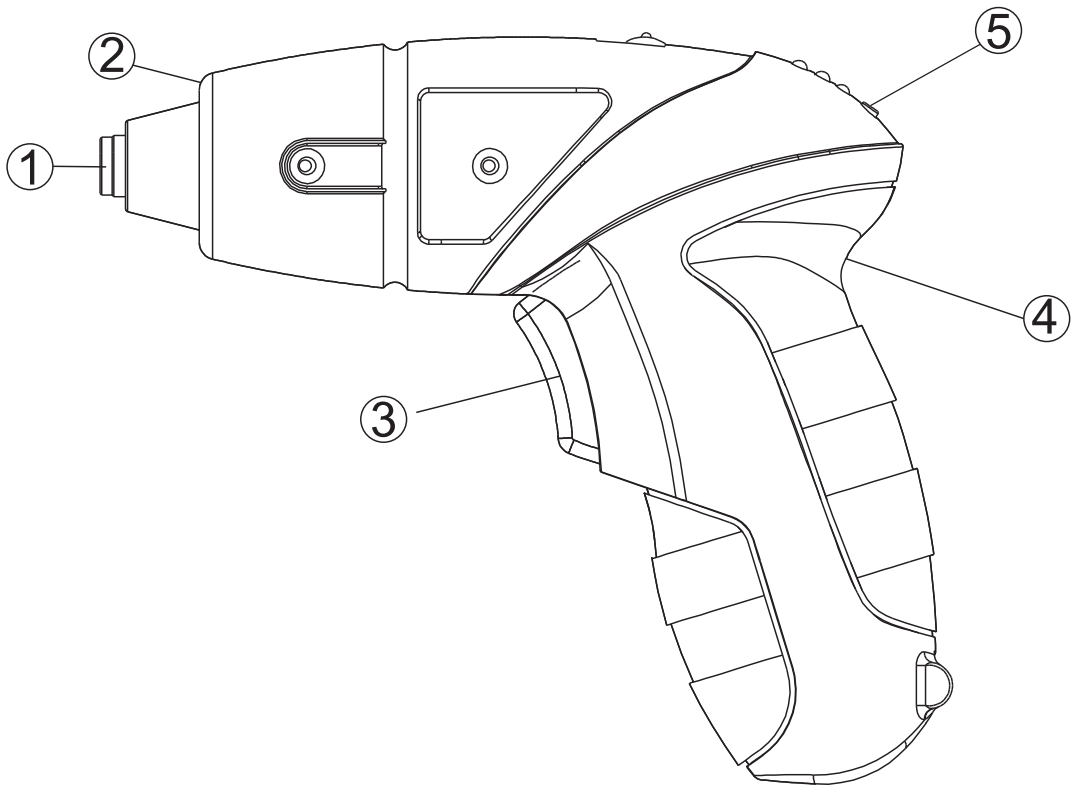

1.Keyless Chuck
2.LED light
3.Forward/Reverse Switch
4.Charging socket
5.Battery Indicator

General Safety

WARNING Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

WARNING: This appliance is not intended for use by persons (including children) with reduced, physical or mental capabilities or lack of experience or knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children must be supervised to ensure that they do not play with the appliance.

Save all warnings and instructions for future reference

The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

1) Work area safety

a) Keep work area clean and well lit. Cluttered or dark areas invite accidents.

b) Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.

c) Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

2) Electrical safety

a) Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.

b) Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.

c) Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.

d) Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of

electric shock.

e) When operating a power tool outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.

f) If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply. Use of an RCD reduces the risk of electric shock.

3) Personal safety

a) Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.

b) Use personal protective equipment. Always wear eye protection. Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.

c) Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool. Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.

d) Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.

e) Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations

f) Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.

g) If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of dust collection can reduce dust-related hazards.

4) Power tool use and care

a) Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.

b) Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.

c) Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.

d) Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.

e) Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.

f) Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.

g) Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.
WARNING: When used in Australia or New Zealand, it is recommended that this tool is ALWAYS
supplied via Residual Current Device (RCD) with a rated residual current of 30mA or less

5) Battery tool use and care

a) Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk

of fire when used with another battery pack

b) Use power tools only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.

c) When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.

d) If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.

e) Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.

6) Service

a) Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.



Before putting the unit into operation, read and observe the instructions for use.



Risk of damage to the eyes! Never look directly into the LED.

Using for the first time

Charging the battery pack



NOTICE!
Risk of damage to the unit!
Do not allow the battery pack to deep discharge.



NOTICE!
Risk of damage to the unit!
Do not press the On/Off switch after the device has deactivated automatically



Note:
The Li-Ion battery pack can be charged at any time without affecting the lifetime of the unit. Interrupting the charging process will not damage the battery pack.

- **The battery pack must be charged prior to the first start-up**

1. Connect the charging cable's micro USB connection to the driver socket.
2. Connect the charging cable's USB connection to the computer's USB port or a USB charger for a wall socket (sold separately,or other cellphone adaptor which output current less than 2.1A).
3. The red light turns on to show it is charging-up. When fully charged it will turn off. Press the battery indicator button (5) to show the battery level – green is a full charge.


Operation

Inserting bits

1. Insert the bit in the magnetic bit holder.
2. Gently pull on the bit to check that it is properly fitted and does not come loose.

Removing bits

1. Pull hard on the bit so that it comes loose from the magnetic bit holder.

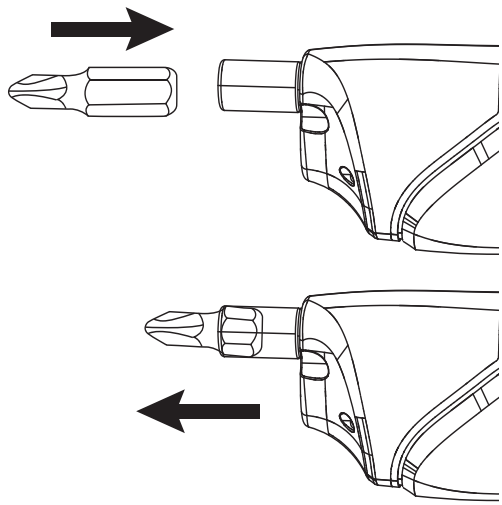

Changing the rotation direction

NOTICE!
Risk of damage to the unit!
Only use the rotation direction switch when the device is at a standstill

1. To screw screws into place, press the rotation direction switch (3) to the forwards (rotation in clockwise direction).
2. To remove screws, press the rotation direction switch (3) to the backwards (rotation in an anti-clockwise direction).

Check before switching on!

Check to make sure the device is in a safe operating condition:

- Check to make sure there are no visible defects.
- Check to make sure all device components are correctly mounted.

Switching on and off

- To start the tool turning, press the On/Off button
- Use the top slider switch to turn on the front LED light (2)
- To switch the unit off, release the On/Off switch

Screwdriver action

- Keep the device in a straight line to the screw.



Note:
Always use the screw bit designed for the screw. If you use the incorrect bit, you may damage the head of the screw.

Cleaning

Cleaning overview

Regularly and according to the operating conditions

What ?	How ?
Clean the ventilation slots of the motor to remove dust.	Use a vacuum, cleaning brush orpaint brush.
Clean the device.	Wipe the unit with a damp cloth.

Preparing for disposal

Removing the battery

At the end of the device lifetime, you should remove all batteries before disposing of the item.

- To remove the batteries from the unit, operate the on/off switch (2) until the batteries are fully discharged.
- Remove the screws on the housing and remove the housing shell.
- Separate the connections on the batteries and remove.
- Dispose of the batteries in accordance with the regulations.

Disposal



Disposal of the appliance

Appliances which are label led with the adjacent symbol must not be disposed of in household waste. You must dispose of such old electrical and electronic equipment separately.

- Please check with your local authority about the possibilities for correct disposal.
  Through separate disposal you send old equipment for recycling or for other forms of re-use. You will thus help to avoid in some cases that damaging material gets into the environment.



Disposal of the packaging

The packaging consists of cardboard and correspondingly marked plastics that can be recycled.

- Make these materials available for recycling



Disposal of batteries and accumulators

Disused batteries and accumulators do not belong in domestic refuse; they must be disposed of as prescribed by regulations.

- Bring batteries which are no longer usable to the battery collection point of the dealer or of your local authority.
- Do not burn accumulators. Risk of explosion

www.hi-spec.tools

Email: support@hi-spec.tools

UK Address: Apollo Fulfilment Ltd., 1 Clohogue, Tempo, Enniskillen, Co.Fermanagh, BT943EQ, UK.

US Address: Hi-Spec Products Inc. 303 S Broadway Ste, 200-518 Denver, CO. 80209, US.

Manufacturing Address: Diversitech Manufacturing Corporation, TongEr Village, LinPu Town, Xiaoshan, Hangzhou, 311251, People's Republic of China