MultiConnect® rCell 100 Series Router LTE Cat 4 (MTR-LNA7, LEU7, L4G1)

Part Number: 82131100L

Copyright and Trademarks

This publication may not be reproduced, in whole or in part, without the specific and express prior written permission signed by an executive officer of Multi-Tech Systems, Inc. All rights reserved. Copyright © 2021 by Multi-Tech Systems, Inc.

Multi-Tech Systems, Inc. makes no representations or warranties, whether express, implied or by estoppels, with respect to the content, information, material and recommendations herein and specifically disclaims any implied warranties of merchantability, fitness for any particular purpose and non-infringement. Multi-Tech Systems, Inc. reserves the right to revise this publication without obligation to notify any person or organization of such revisions or changes.

MultiConnect, MultiTech and the MultiTech logo are registered trademarks of Multi-Tech Systems, Inc. All other brand and product names are trademarks or registered trademarks of their respective companies.

Multi-Tech Systems, Inc
2205 Woodale Drive,
Mounds View, Minnesota 55112 U.S.A.

Phone: 763-785-3500 or 800-328-9717
Fax: 763-785-9874

Support


Support Portal
https://support.multitech.com

Knowledge Base
http://www.multitech.com/kb.go

Europe, Middle East, Africa:
support@multitech.co.uk
+(44) 118 959 7774

U.S., Canada, all others:
support@multitech.com
(800) 972-2439 or (763) 717-5863

Business Hours: M-F, 8am to 5pm CT

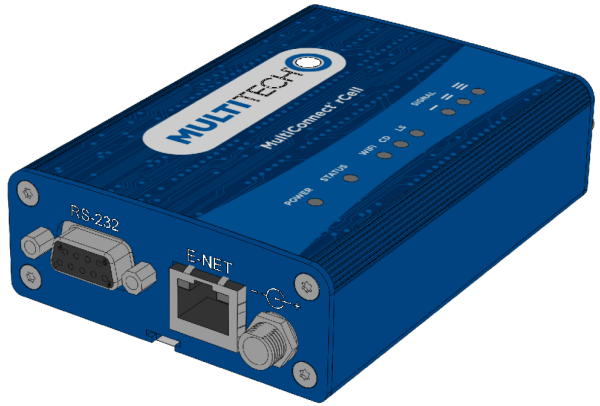


MultiConnect® rCell 100 Series Router LTE Cat 4

MTR-LNA7, LEU7, L4G1 Quick Start

WWW.MULTITECH.COM

For -HZ models only, see guides for safety information:

- https://www.multitech.com/wp-content/uploads/S000754-MTR-LNA7-HZ-HW-Guide.pdf
- https://www.multitech.com/wp-content/uploads/S000753-MTR-LEU7-HZ-HW-Guide.pdf

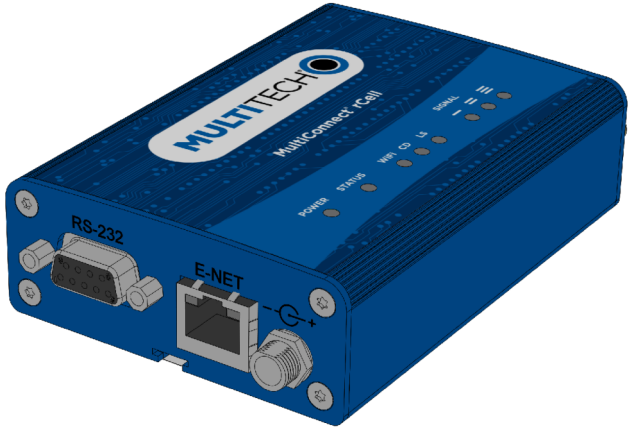

LED Descriptions

The top panel contains the following LEDs:

- **Power and Status LEDs** - Power LED indicates DC power is present and Status LED blinks when unit is functioning normally.
- **Modem LEDs** - Two modem LEDs indicate carrier detection/link status.
- **Wi-Fi LED** - Indicates if device is serving as Wi-Fi access point or Wi-Fi client. Varies with model.
- **Signal LEDs** - Three signal LEDs display signal strength level of wireless connection.

- **Ethernet LEDs** - Instead of top panel, two Ethernet LEDs are on RJ-45 connector.
  - **Ethernet Link LED** - Located on the right on the Ethernet connector. LED blinks when there is transmit/receive activity and is steady when there is a valid Ethernet connection.
  - **Ethernet Speed LED** - Located on the left on the Ethernet connector. When lit the Ethernet is linked at 100Mbps. If it is not lit, the Ethernet is linked at 10 Mbps.

Installing the SIM Card

To operate the device on a particular network, install a micro (3FF) SIM card. We recommend using a SIM card rated for industrial use.

To install the SIM:

1. Locate the SIM card slot labeled SIM on the side of the device.
2. Push the SIM card into the slot until it snaps into place.

