DISASSEMBLY

REMOVE CHUTE FROM BASE

1. Rotate chute clockwise.



2. Remove chute assembly from base.



DISASSEMBLE CHUTE

3. Unscrew bottom cap from blade cover (counter-clockwise).



WARNING: Blades are very sharp! Do not touch blades.

4. Carefully remove blade cone.

CAUTION: Blades are sharp.

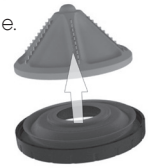

5. Remove gasket by lifting.



CAUTION: DO NOT attempt to disassemble, clean or service your Yonanas maker while power switch is on and/or electrical cord is plugged into power source!

CLEANING



Dishwasher-safe Components

Wash all five (5) components of chute assembly with soap and warm water or in the top rack of a dishwasher. Wipe base with damp cloth.



DO NOT submerge base, plug or cord in any liquid or allow liquid to enter motor housing or electrical components.