
Exploded Views

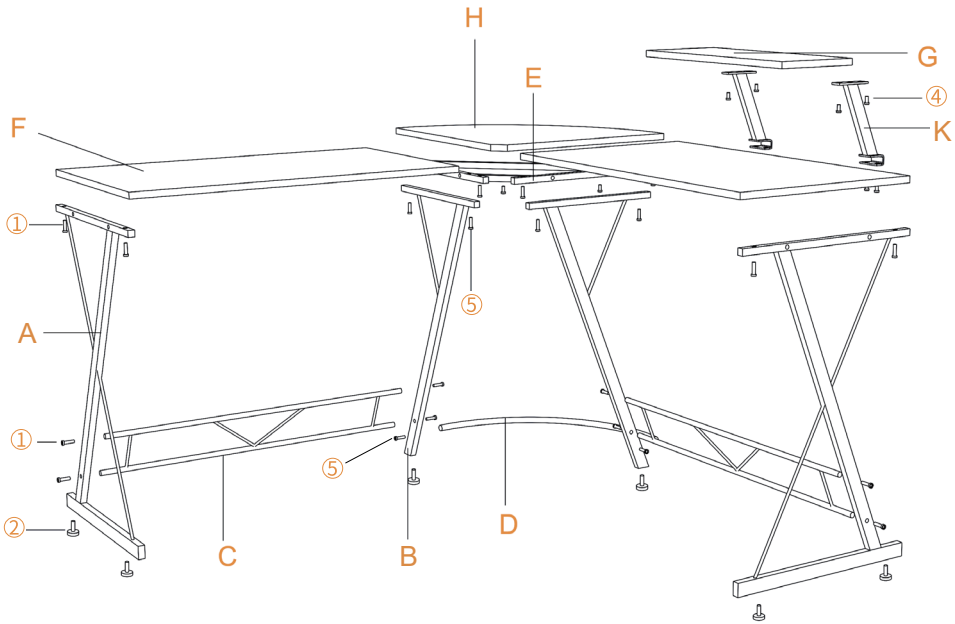

Parts Distribution

Two people are recommended to install.


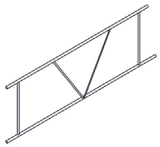











Image representation:

A  x2	B  x2	C  x2	D  x1
E  x1	F  x2	G  x1	H  x1
K  x2	①  M6x25 x19	②  M6 x6	③  x2
④  M6x12 x8	⑤  M6x40 x6		


Installation Demo

1

Install the A and E by tightening all screws ① to 100% tighteness.

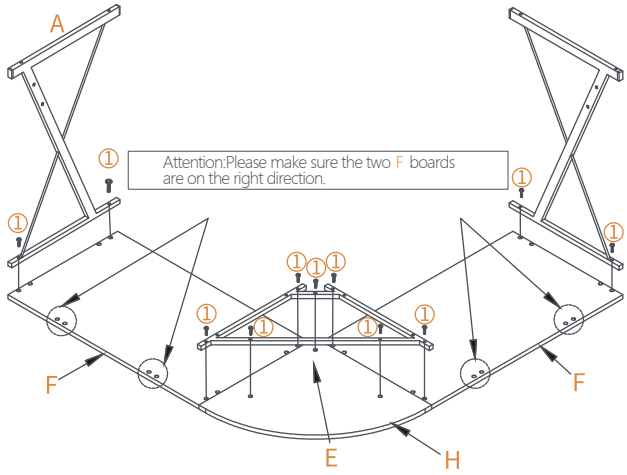


Attention: Please make sure F and H are seamless and properly matched before tightening screws ①.

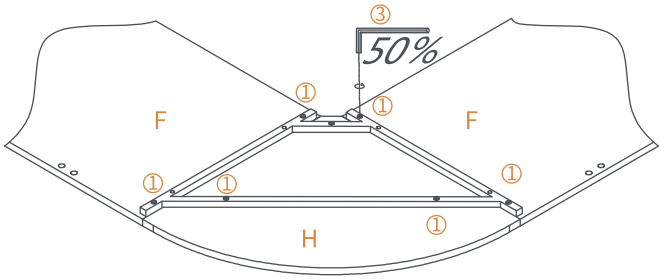


A x2	E x1	F x2	H x1	① x11	③ x1

Installation Demo


2 Tighten ⑤ screws to fix B×2 through the frame E on the desktop.

B x2	
⑤ x4	
③ x1	

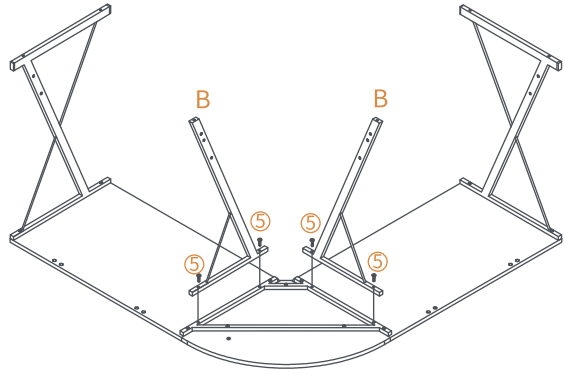

3 Install the two frames C by tightening all ① screws to 70% tightness, do not tighten completely.


C x2	
① x8	
③ x1	

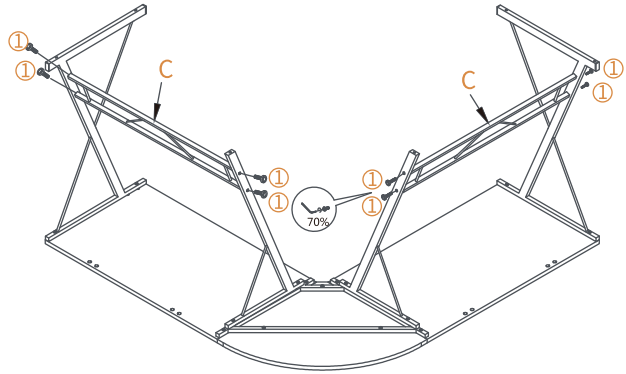

Installation Demo

4


Install the frame D by tightening all ⑤ screws to 100% tightness.

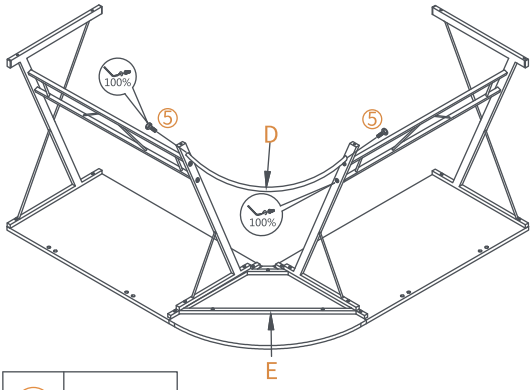

⑤ x2	D x1	③ x1

5

Assemble the botton foot pad.

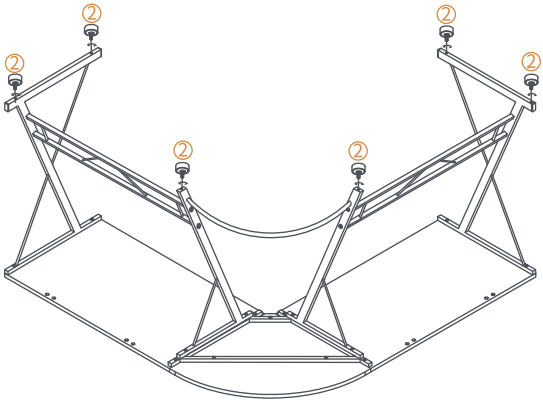


② x6

Installation Demo

6

Assemble the monitor shelf brackets K×2 to the monitor shelf panel G by tightening all ④ screws.

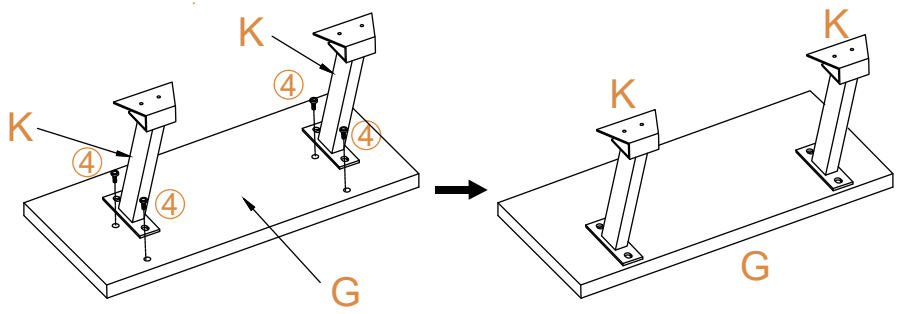


G	K	④	③
x1	x2	x4	x1

7

Install the monitor shelf to the right or the left desktop, Adjust ④ screws to ensure the G Board is parallel to the desktop.

④	③
x4	x1

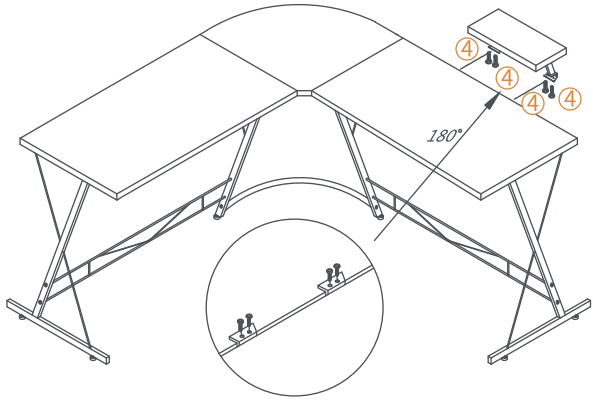

Installation Demo

8 Please make sure that all the screws are 100% tightened.
CONGRATULATIONS！ Assembling complete!
Attention: The monitor shelf can be installed on both right side and left side on the desk top.

